


When EAC device is going to release e-Strike and activate door opening simultaneously when connected to a standard e-Strike.

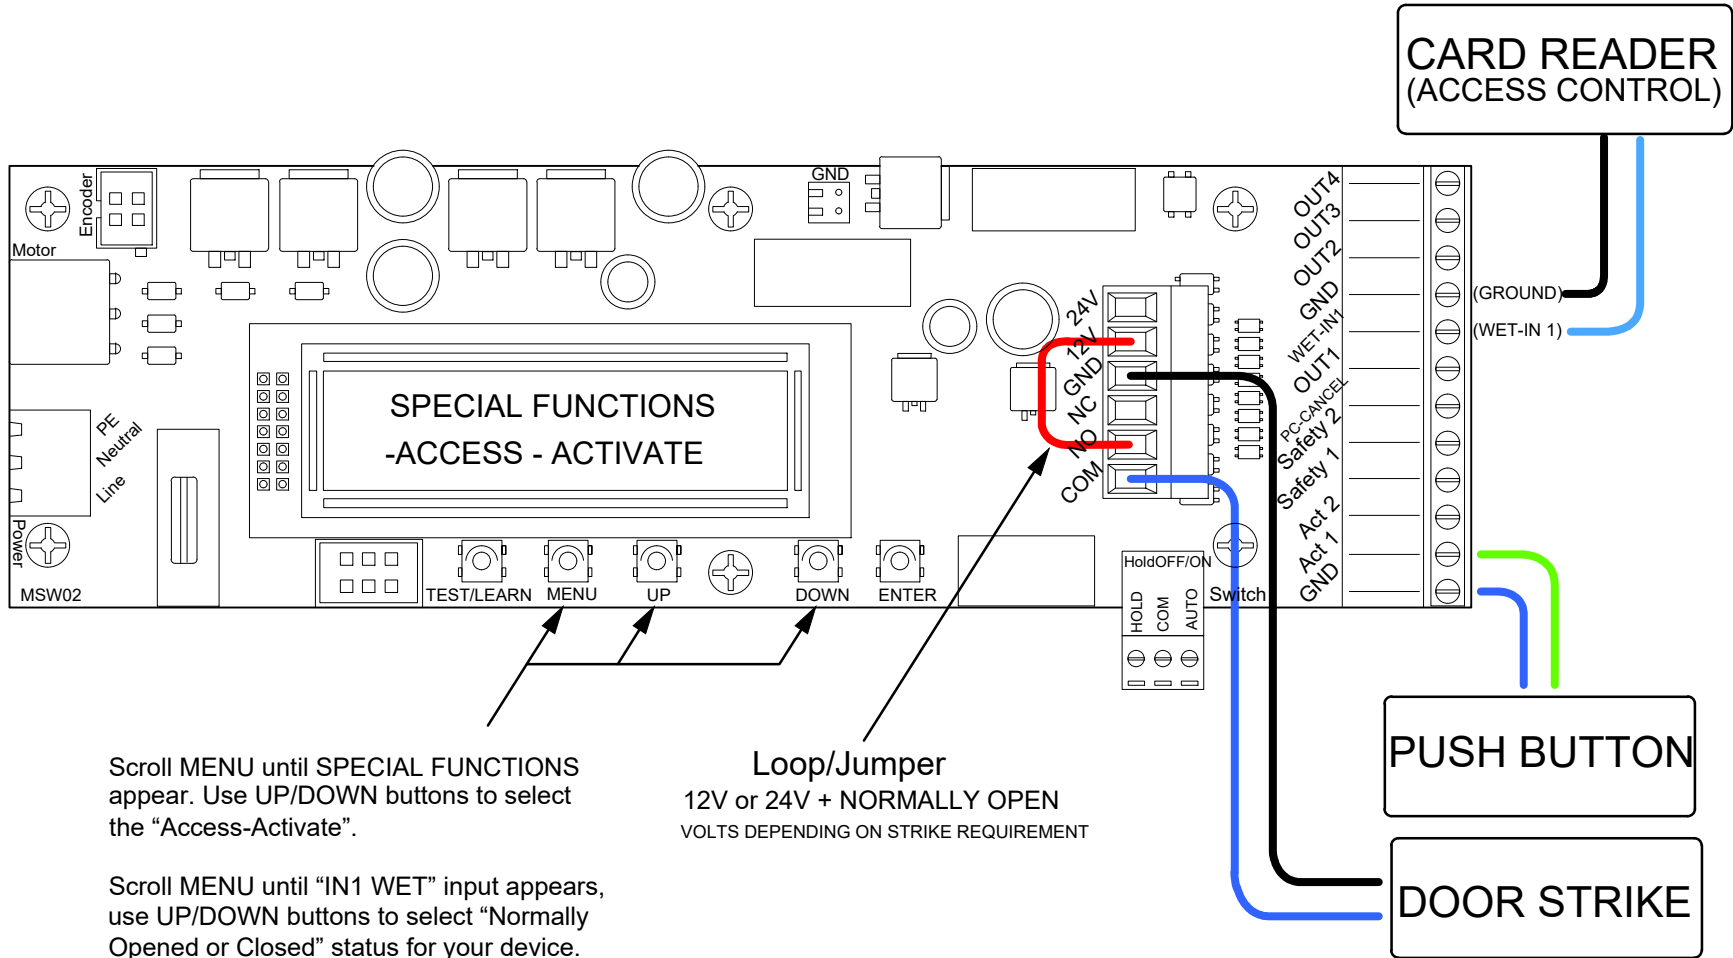

Scroll MENU until SPECIAL FUNCTIONS appear. Use UP/DOWN buttons to select the "Access-Activate".

Scroll MENU until "IN1 WET" input appears, use UP/DOWN buttons to select "Normally Opened or Closed" status for your device.

Loop/Jumper
 12V or 24V + NORMALLY OPEN
 VOLTS DEPENDING ON STRIKE REQUIREMENT

The illustration and technical description in this cut sheet is current as of the date in version date on the right. Cal-Royal Product reserves the right to, and may, on occasions, make changes and/or improvements in designs and dimensions without prior notice.

	6605 Flotilla Street City of Commerce CA 90040 USA Tel: # (323) 888-6601 FAX: # (323) 888-6699 WEB SITE: CAL-ROYAL.COM Email: sales@cal-royal.com		ITEM NO.	DESCRIPTION :	NOT TO SCALE	UNIT	Prepared By:	DATE	DWG. NO.
	8600 Series	OPERATOR WITH CARD READER, PUSH BUTTON AND DOOR STIKE WIRING DIAGRAM	PAGE 1 OF 1	PRIMARY DIMENSION SHOWN IN INCHES, DIMENSIONS IN () ARE MM	BBT/ADG/SC CVL/CMT/AED	12/2022	DCG-1060		
								VER: DIAGRAM 1	