


### DIP SWITCH SETTINGS

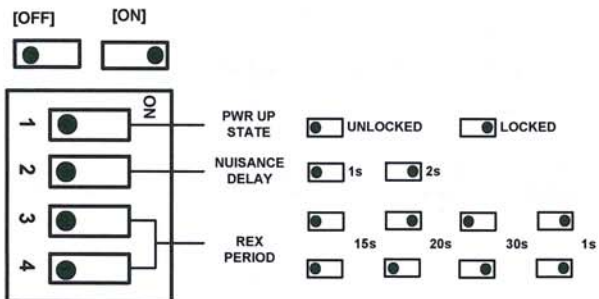

### MONITOR RELAY JUMPER SETTINGS



### Cable Functions

GRY =DPS  
VIO = Remote Trig  
ORG = Slave out  
BRN = Red Relay  
GRN = Grn Relay  
YEL = Relay Common  
BLU = Reset / Auth Egress  
WHT = Bypass  
RED =Power (+)  
BLK = Power (-)