


9800 HEAD ASSEMBLY INSTRUCTIONS TO CHANGE HANDING

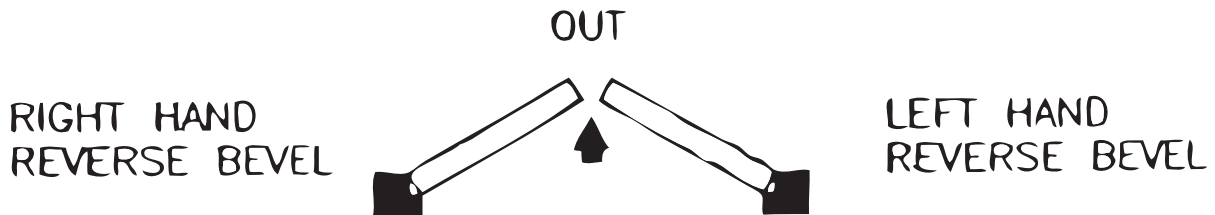

- TO CHANGE HAND OF #F9860V EXIT DEVICE.
1. REMOVE CHASSIS PINS AND MAIN SLIDE.
 2. REMOVE LIFT LEVER PIN AND LIFT LEVER.
 3. REASSEMBLE LIFT LEVER AT OPPOSITE SIDE, AS SHOWN.
 4. REPLACE MAIN SLIDE AND CHASSIS PINS.

