

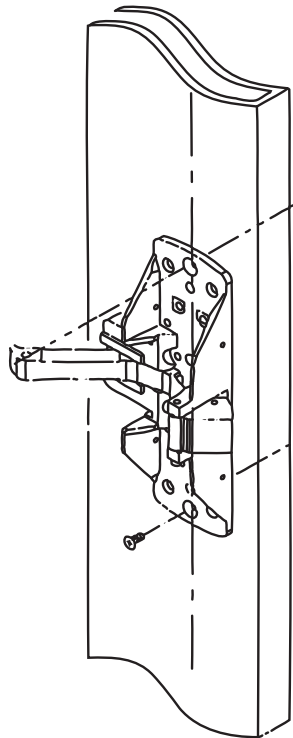
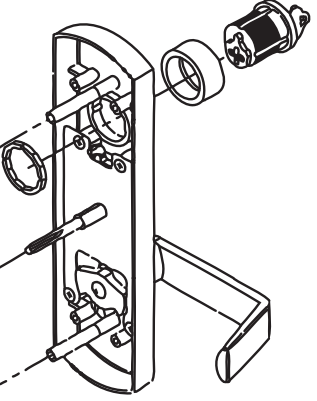
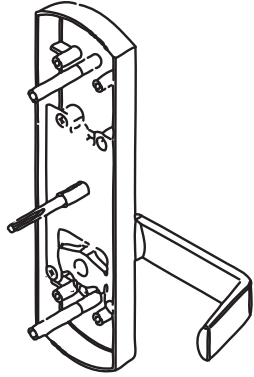


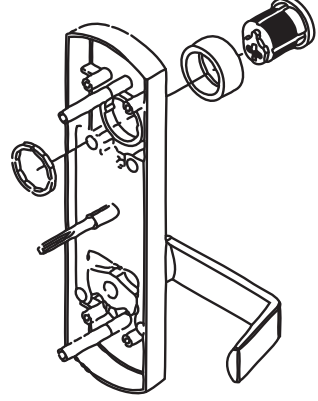

INSTRUCTIONS FOR CAL-ROYAL NESC TRIM FOR 9800 SERIES EXIT DEVICE

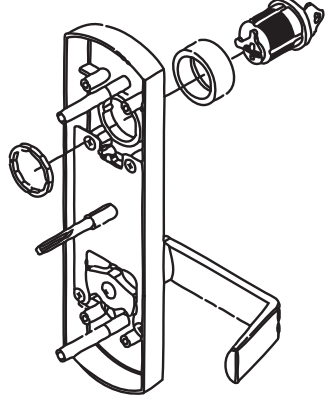

NESC-9800	NESC-9830	NESC-9840	NESC-9805
 <p data-bbox="487 885 808 1015">Lockable Escutcheon Lever Trim. Key locks and unlocks lever.</p>	 <p data-bbox="865 885 1113 966">No cylinder, Trim always operable.</p>	 <p data-bbox="1249 885 1543 1055">Pull when push bar locked down. Dummy Escutcheon Lever Trim</p>	 <p data-bbox="1627 885 1963 1096">Key unlocks Esc Lever, and remains in cylinder unless locked. Cylinder Escutcheon Lever Trim.</p>
<p data-bbox="535 1128 787 1242">13 Function Entrance</p>	<p data-bbox="913 1128 1165 1242">15 Function Passage</p>	<p data-bbox="1291 1128 1543 1242">10 Function Dummy</p>	<p data-bbox="1669 1128 1921 1242">04 Function Storeroom</p>
<p data-bbox="493 1266 819 1485">Attach the collar and mortise cylinder to the escutcheon case with mortise nut, attach case to door thru-bolting (2) screws to the chassis, aligning spindle to hub of the chassis.</p>	<p data-bbox="871 1266 1197 1388">Attach escutcheon case to door thru-bolting the (2) screws to the chassis, aligning spindle to hub of the chassis.</p>	<p data-bbox="1249 1266 1575 1421">Attach the collar and dummy cylinder to the escutcheon case with mortise nut, attach case to door thru-bolting (2) screws to the chassis.</p>	<p data-bbox="1627 1266 1953 1485">Attach the collar and mortise cylinder to the escutcheon case with mortise nut, attach case to door thru-bolting (2) screws to the chassis, aligning spindle to hub of the chassis.</p>