



DOOR AND FRAME LOCATIONS

Standard Hardware Locations 4-1/2" Hinge

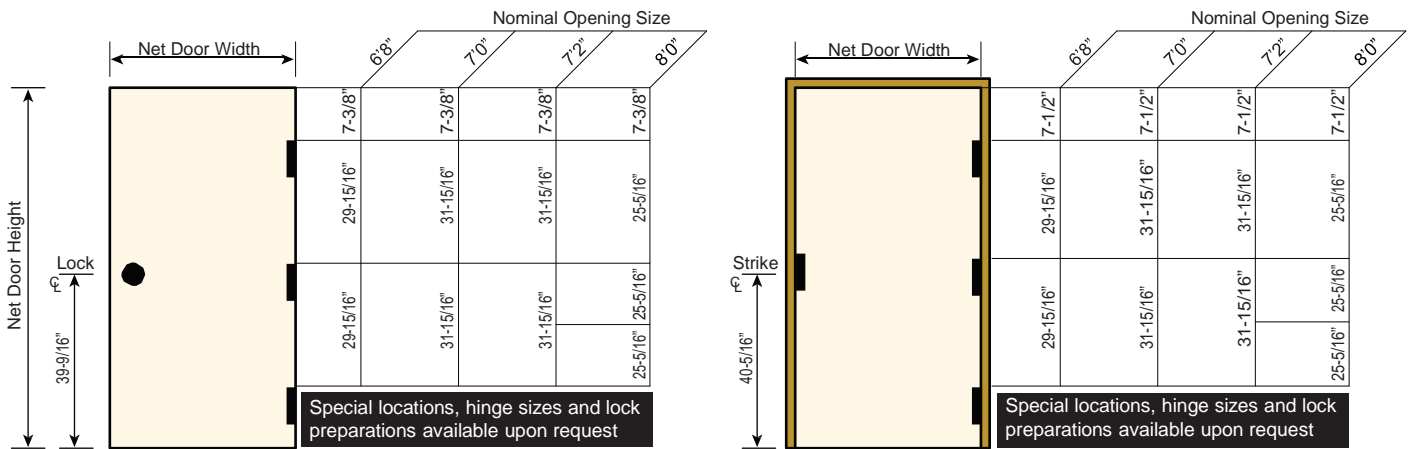


SINGLE SWING DOORS


When door swings towards you and hinges are on the right side of the door - Door is R.H.R. / Frame is L.H.
 When door swings inside and hinges are on right side of the door - Door is R.H. / Frame is R.H.

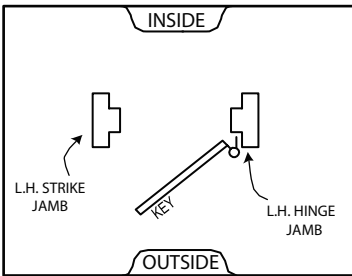


Right Hand Reverse Door (Swing Out) Left Hand Frame

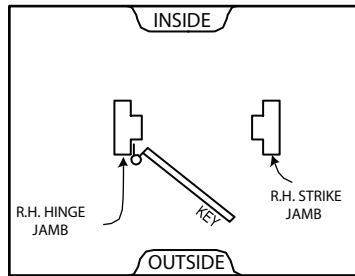

Left Hand Reverse Door (Swing Out) Right Hand Frame

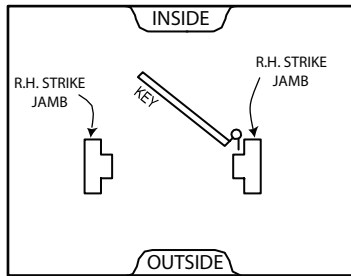


Right Hand Door (Swing In) Right Hand Frame

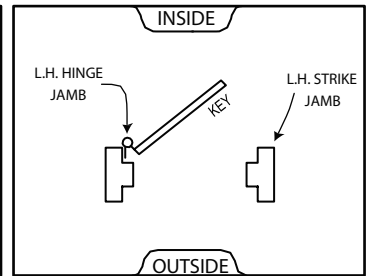


Left Hand Door (Swing In) Left Hand Frame

DOUBLE DOORS


When door leaf swings towards you and hinges are on the right side of active leaf - Door is R.H.R. Active / Frame is L.H. Active
 When door leaf swings inside and hinges are on right side of active leaf - Door is R.H. Active / Frame is R.H. Active

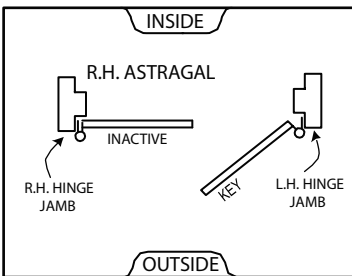


Pair of Doors - R.H.R Active (Swing Out)
 Double Door Frame L.H. Active

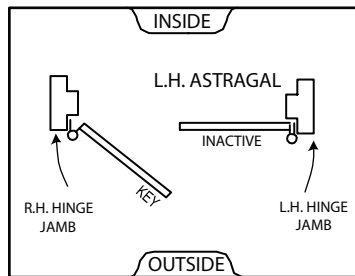

Pair of Doors - L.H.R Active (Swing Out)
 Double Door Frame R.H. Active

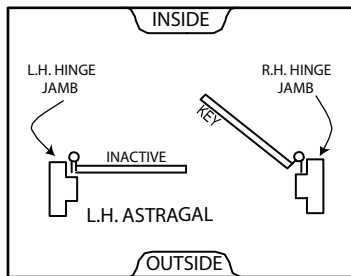

Pair of Doors - R.H. Active (Swing In)
 Double Door Frame R.H. Active

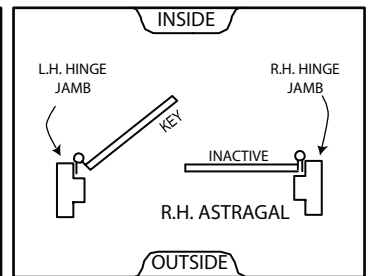

Pair of Doors - L.H. Active (Swing In)
 Double Door Frame L.H. Active