

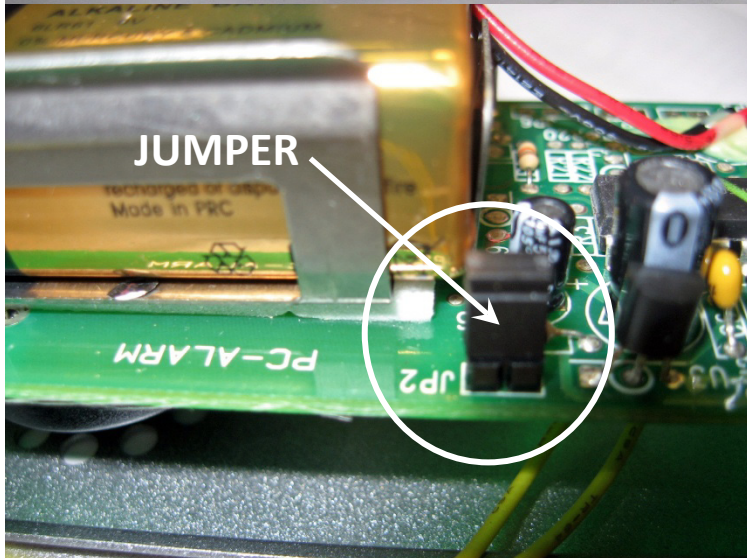


How the alarm works for ALARM9800E036

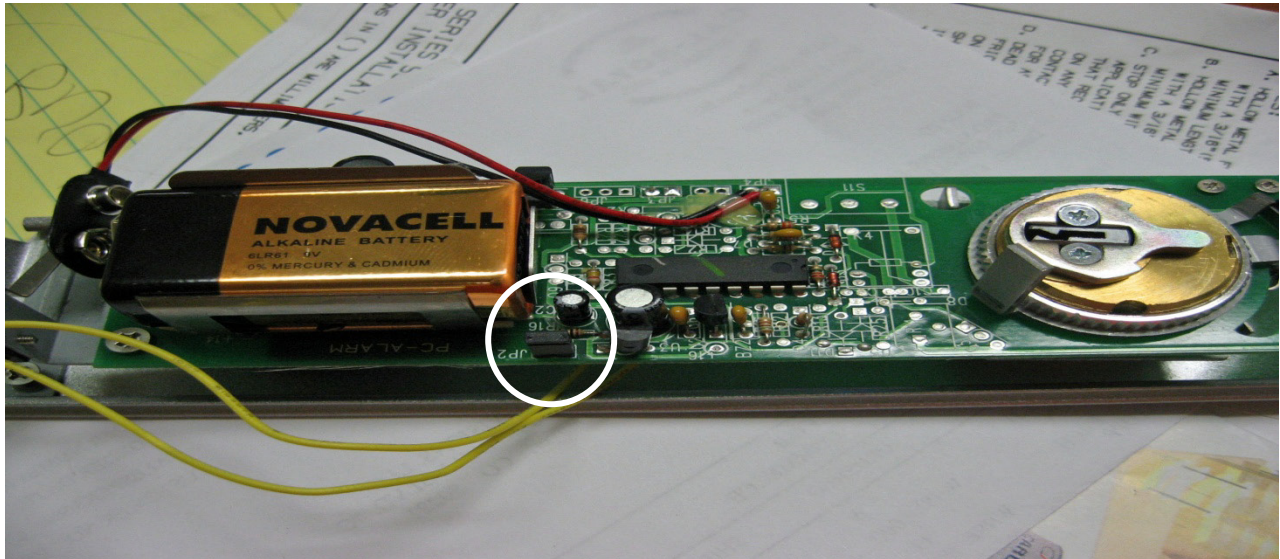

With jumper in place
(Default setting):

When triggered, the alarm sounds for 2 to 2 ½ minutes and turns off for 5 seconds, then turns on again every 5 seconds until reset by key or battery dies out.

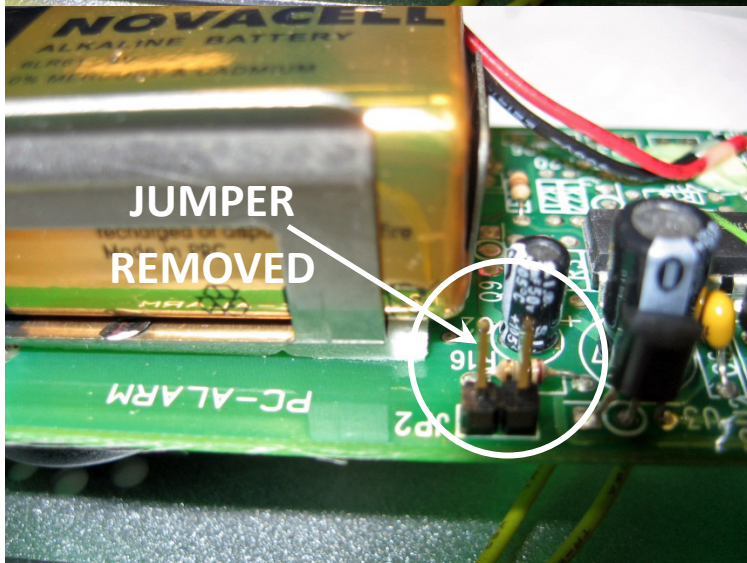

With jumper removed:

When triggered, the alarm sounds for 2 to 2 ½ minutes and then turns off or reset by key.