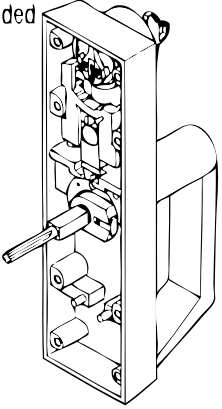
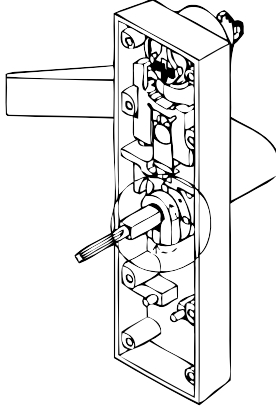
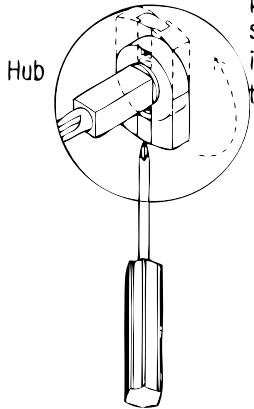
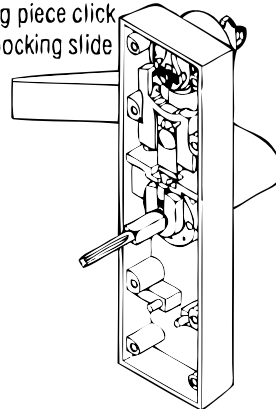
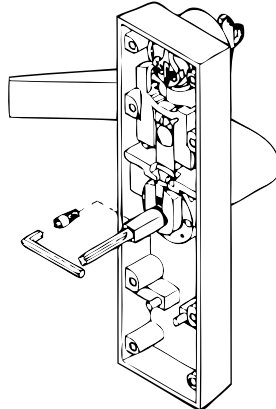
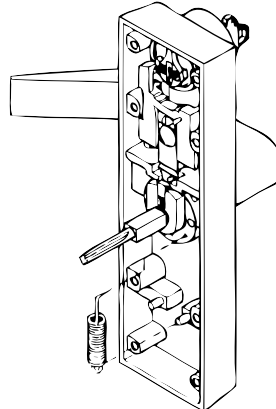
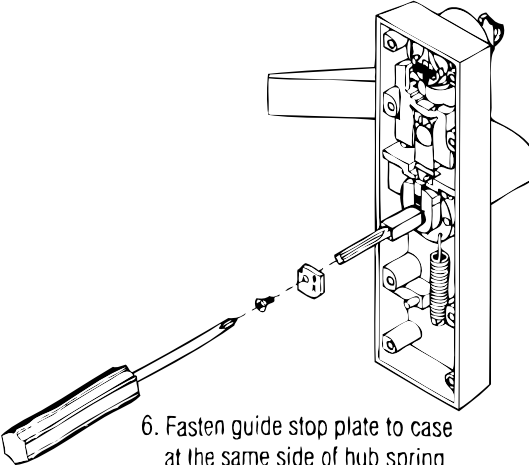
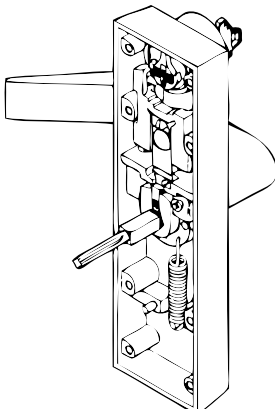


CAL-ROYAL Esc Lever Trim

Method for changing hand of lever RHR

<p>1. Lever Trim shipped and supplied with lever positioned neutral, Non Handed</p> 	<p>2. Rotate lever handle to desired hand</p> 	<p>3. Depress & push in the spring loaded locking piece in the "up" position to rotate hub. Make sure spring loaded locking piece click in place & is in line with locking slide to operate</p>  <p>Hub</p>	
 <p>4. Fasten stop screw on the other side, using hex wrench</p>	 <p>5. Mount the hub spring on opposite groove pin</p>	 <p>6. Fasten guide stop plate to case at the same side of hub spring</p>	 <p>Done</p>

Method for replacing cyl

1. With locking slide in down position, unscrew cylinder nut and remove the cylinder ring.
2. Replace cylinder by reversing above procedure. Make sure that cylinder cam points up and correct length of rin is used.