



FOR LOCATION OF MR9800 SERIES MORTISE RIM  
DEVICE USING PULL TRIM, OR LEVER HANDLE RIM  
SEE INSTALLATION INSTRUCTION

**MR9800 TEMPLATE FOR RIM EXIT DEVICE**