



4 INSTALL STRIKE

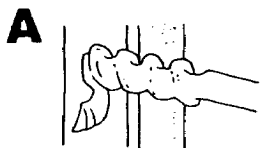

Bore 25mm (1") hole 25mm (1") minimum deep for deadbolt.

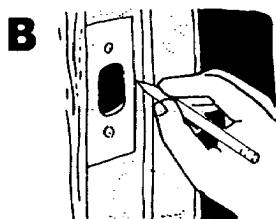

Center Strike plate over hole and mark around outside.

 
5 INSTALL EXTERIOR MECHANISM



Press cylinder side flush against door making certain the torque blade is properly positioned in latch crank.

Tapped holes in mounting plate of exterior cylinder should be lined up with latch holes. Key hole should be in down position.

TORQUE BLADE SHOULD BE HORIZONTALLY INSERT INTO LATCH CRANK




6 INSTALL INTERIOR MECHANISM



TORQUE BLADE
Slide turnpiece and interior rosette onto torque blade.

B
25mm (1") THROW

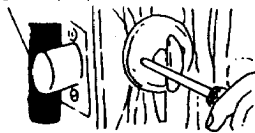

Insert machine screws through holes, engaging holes in cylinder and tighten.

INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADLOCKS

Exterior half is fully assembled with exterior torque blade



NOTE: This assembly is placed through latch first.



B
Press interior assembly flush against door making certain the torque blade is properly positioned in latch hole. Key hole should be in down position.

A Install interior cylinder



NOTE: The interior torque blade is inserted into the exterior blade.



Insert (2) two screws through countersunk holes engaging holes in exterior cylinder and tighten.