




You can use the experienSmart app to lock and unlock your door remotely, as well as create unique access codes for guests and household members.



1 Create Account

First, please create an account or register on the app.

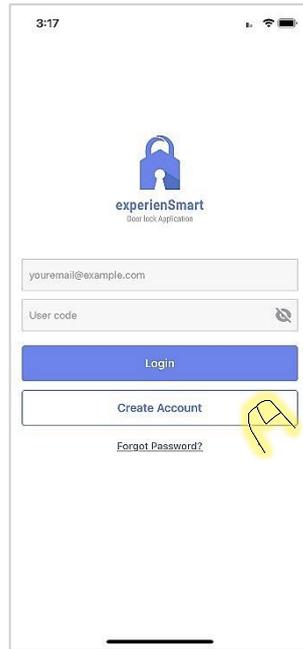

2-1 Register Lock


In order to register the installed lock, please click the + icon on the bottom page as shown below.

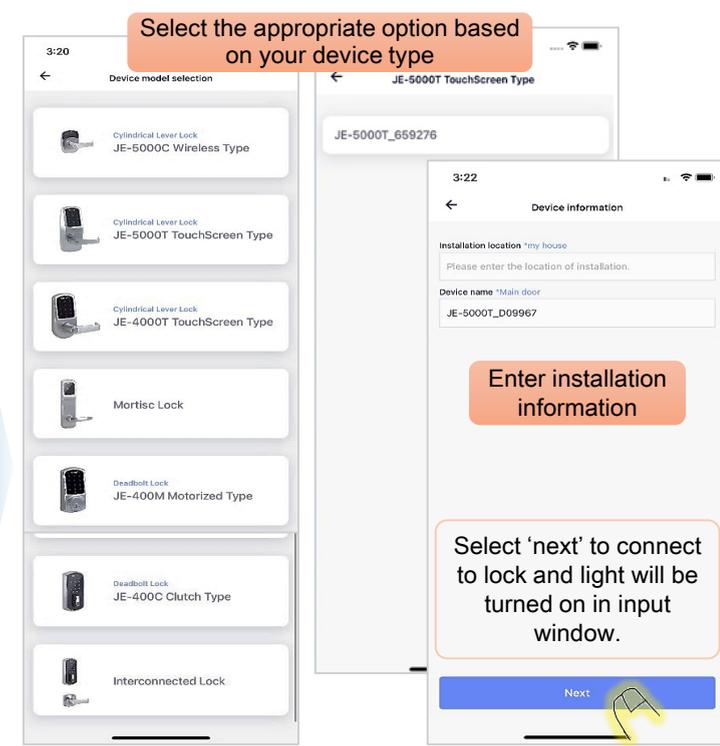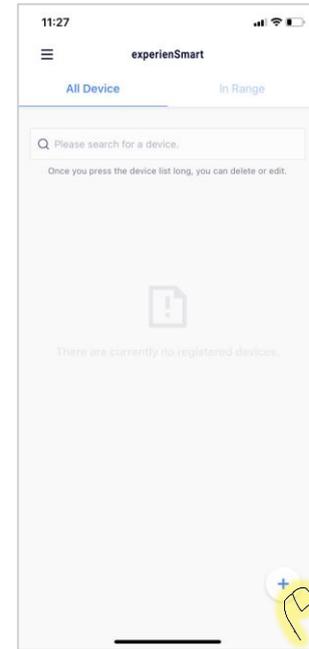


- ★ Select JE-5000T for CR6100 or CR6501
- ★ Select JE-400M for JE-80M
- ★ Select Interconnected Lock for EJHIL30

2-2 Register Lock

When the lock is connected, the number lights will turn on in the input pad, as shown in the picture on the bottom right.



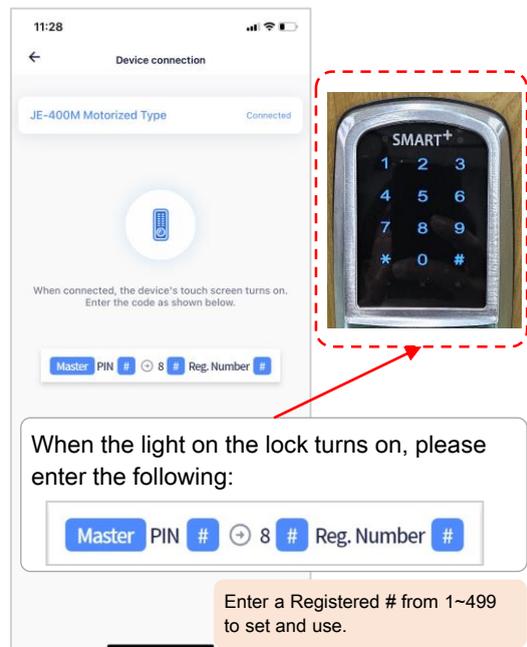


The installed lock has been registered. Click 'Complete' to check the registered lock.

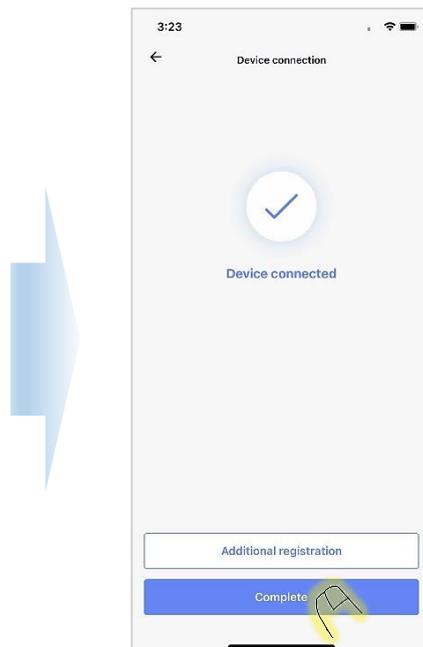


3 Operate the Registered Lock

You can lock or unlock by selecting the registered lock.

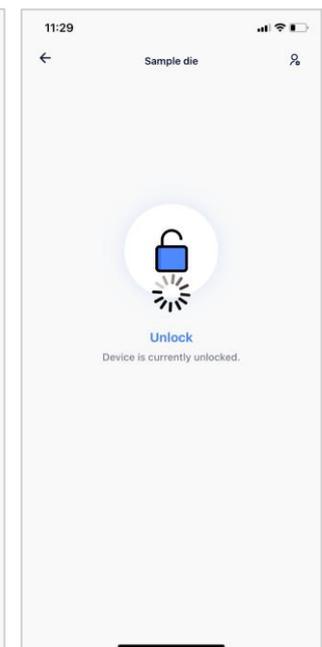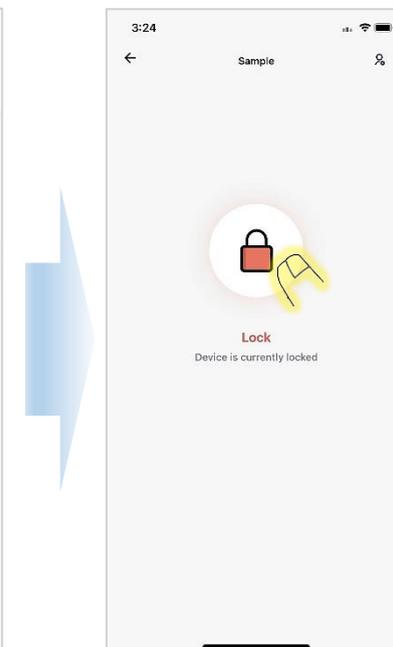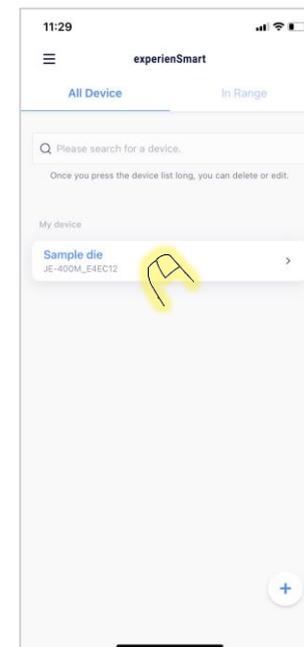

4 Enter the Setting Mode of the Registered Lock


- ① Select the lock. → ② Select the settings icon. → ③ Once you enter the Master code, the screen will switch to the settings.

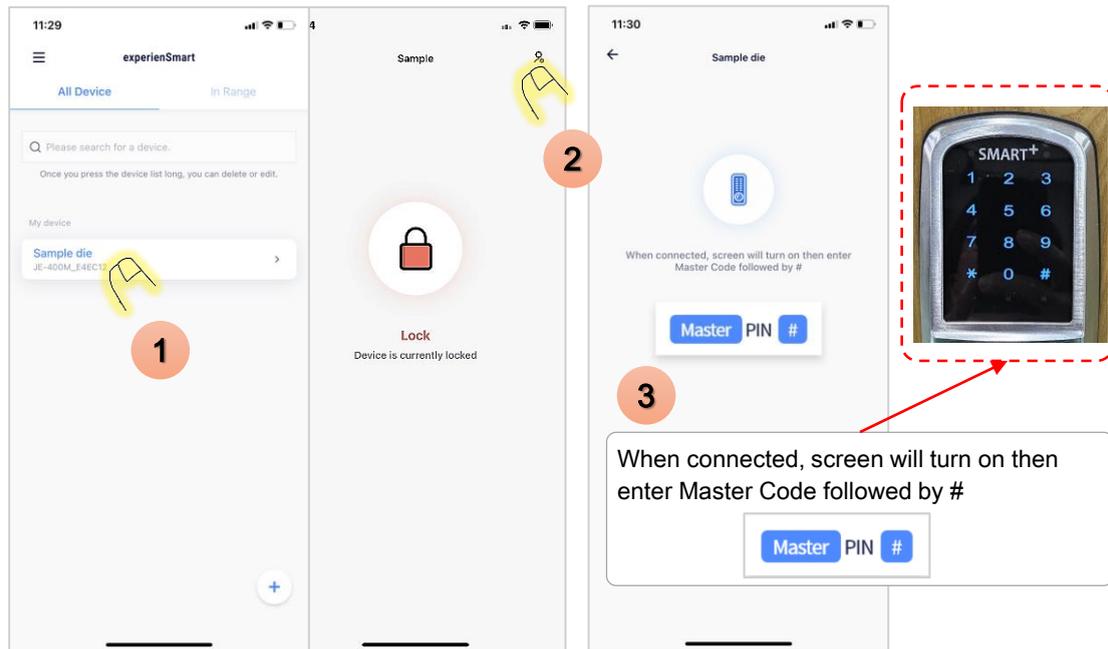

5 Enter the Setting Mode


You can perform the following functions in Settings :

- ① Check the registered code details and register a new code
- ② Register the card and mobile phone details, along with a new card for registration.
- ③ You can register one Audit trail Code.
 - When entering setup mode, you can use it by entering the Audit trail Code.
 - You can check the details of access to the lock mode using the registered Audit trail Code.
- ④ You can check the details of access to the lock.
- ⑤ You can check the volume of the lock and the Relock Time.

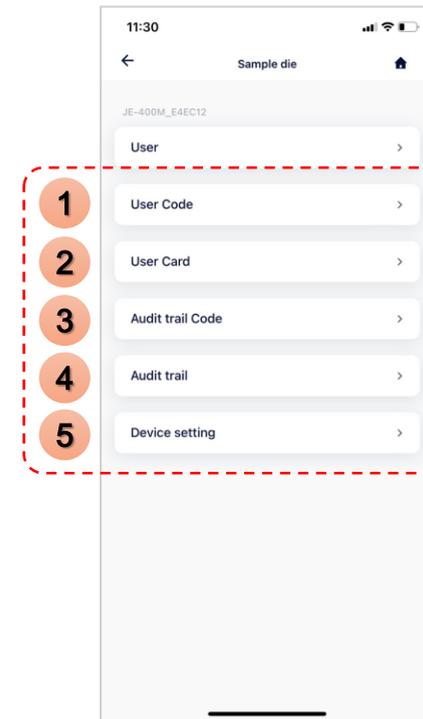


5-1 Check User Card & User Code

Check the code & card details and register new ones.

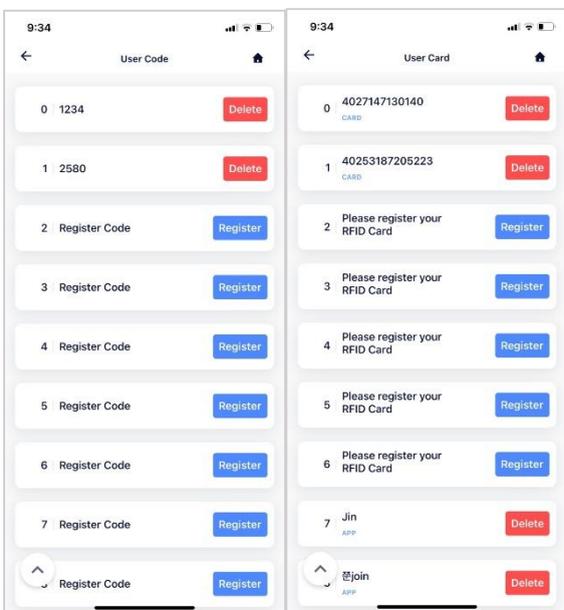


5-2 Add Audit trail Code

Enter 6 digits and then press # to save.

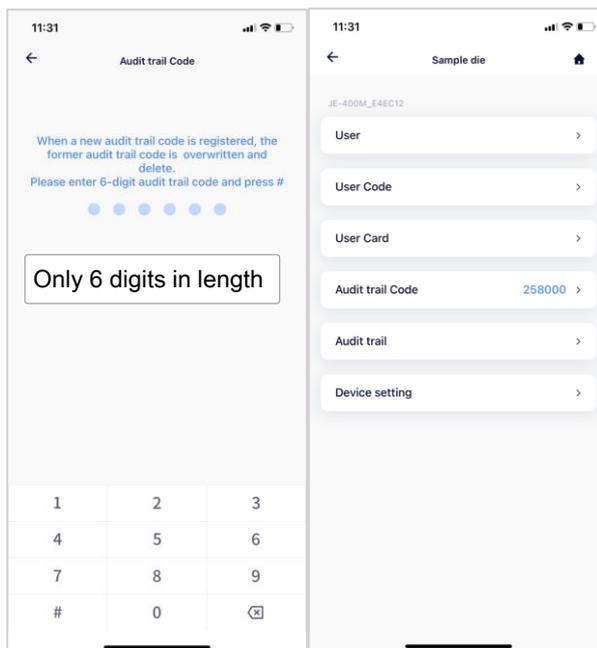

5-3 Check Audit trail

You can check the access history using the Master Code or Manager Code. The confirmed access history can be saved as an Excel file and emailed.

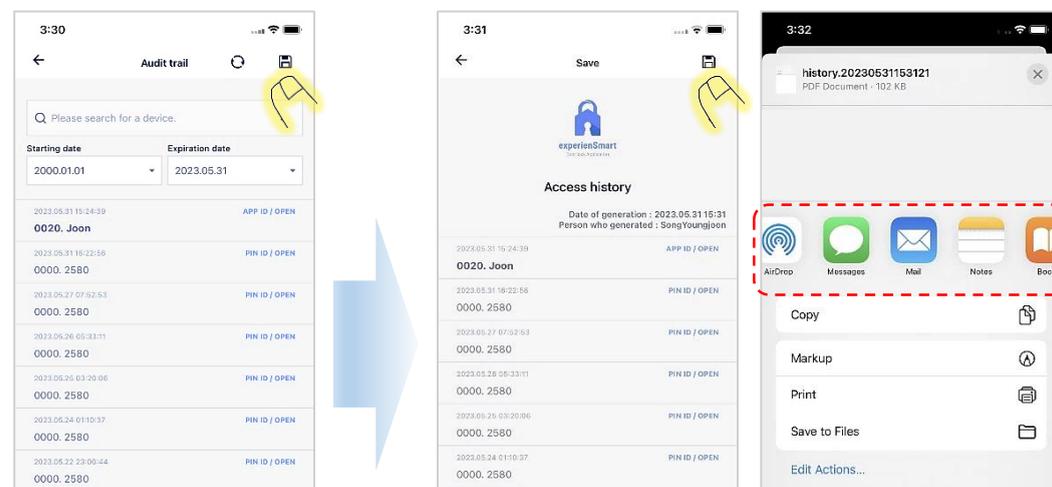

1. When batteries are inserted, the factory-default time is 2000-01-01 09:00.
2. In order to set the local date and time, register a lock using a mobile app.
3. The lock's time and date are automatically synchronized with the time and date on your mobile device.