



INSTALLATION INSTRUCTIONS **ASHLEY SERIES (Premier, Ritz and Signature)**

Functions: 00, 05, 20 & 30

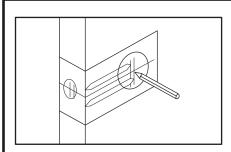


1. Mark door with template.

- a. Start 36" (914mm) from floor or as desired. Fold and apply template and mark center of door edge.
- b. Select 2-3/8" or 2-3/4" (60mm or 70mm) backset as desired and mark center opf hole on door face.

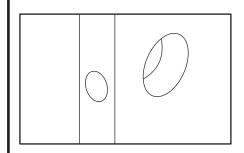


2. Drill Holes.

 - a. Drill 2-1/8" (54mm) hole on door face, from both sides to avoid wood splitting.
- b. Drill 1" (25.4mm) hole for latch




3. Install Latch

 
a. Insert latch into hole and mark outline of faceplate.



 b. Chisel 1/8" (3mm) deep.




c. Insert latch and tighten screw.

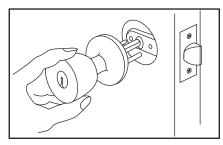

4. Install outside knob or lever


a. Insert spindle through latch. Press flush against door.


NOTE: Keyhole must be in down position.

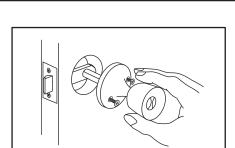


5. Install inside knob or lever

 a. Install inside knob and at the same time align holes for the screw s. b. Tighten screws until lock is firm.

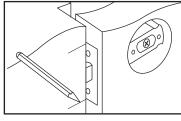

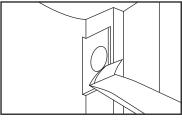



6. Install strike.

- a. Close door to make horizontal line of strike on the jamb.
- b. Measure 1/2 of door thickness from door stop and mark vertical center line of strike.
- c. Drill 1" (25.4mm) hole 1/2" (13mm) deep at intersection of horizontal and vertical line of strike.
- d. Match screw holes on strike with center lines on jamb.
- e. Mark outline and chisel 1/16" (1.6mm) deep for stike.
- f. Install strike and tighten screws.