
INSTALLATION INSTRUCTION FOR AF22EO SERIES FIRE RIM EXIT DEVICE BEFORE INSTALLING DEVICE, PLEASE CHECK: IF DOOR FITTED AND HUNG. SIZE OF EXIT DEVICE, FUNCTION AND DESIGN... 2.1 36" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 30" WIFE. 2.2 48" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 36" WIFE. 2.3 HAND OF DEVICE AGAINST APPLICATION. OUT MOUNTIN RAIL

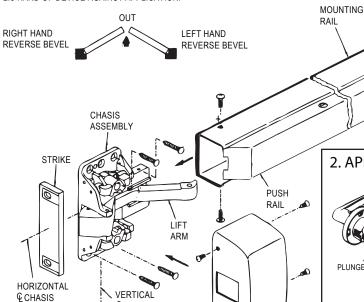


CHASIS

(LHRB)


1. PREPARE DOOR

 
 FOR 2-1/8"Ø BORE PREP POSITION TEMPLATE OVER EXITING HOLE AND MARK FOR TWO CHASIS MOUNTING SREW HOLES.`



HEAD COVER

2. FOR DOOR W/O BORE PREP, MARK VERTICAL CENTER LINE CHASIS AND HORIZONTAL CENTER LINE CHASIS USING DIMENSION BELOW

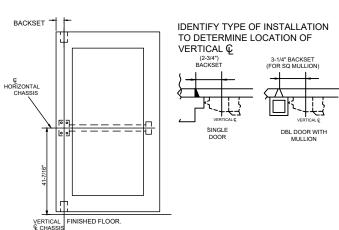

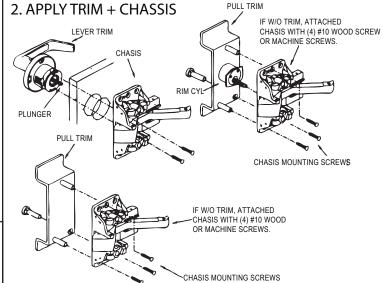

END CAP

RAIL MOUNTING

BRACKET

SLIDING SHIM


3. APPLY RAIL ASSEMBLY

SURFACE OF DOOR FOR

BE FLUSHED

EXIT DEVICE APPLIED MUST

- CHASIS THE SIZE OF DEVICE, IF CUTTING TO LENGTH IS REQUIRED.
- DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1-3/4" FROM "Y". MARK CUT OFF POINT ON MOUNTING RAIL.
- 3. DEPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASIS. LEVEL RAIL AND FASTEN CHASIS AND MOUNTING PLATE.

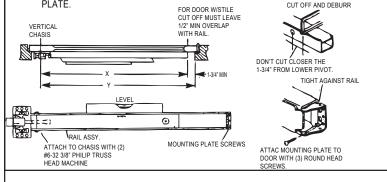

4. APPLY COVER AND STRIKES







ATTAC END CAP TO MOUNTING PLATE WITH (2) COVER SCREW.



ATTAC STRIKE TO DOOR STOP WITH (2). STRIKE SCREW AND LOCK WASHER.