



RS-2000 / RS-2100


Reverse Handing Instructions

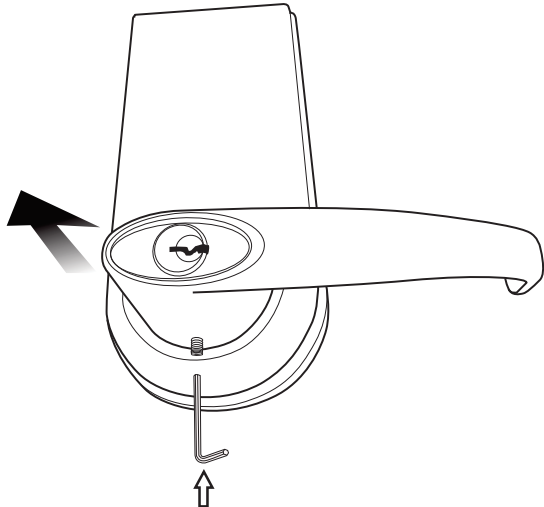

1. Unscrew both the inside and outside set screws of the levers using the supplied allen wrench. Remove both levers.

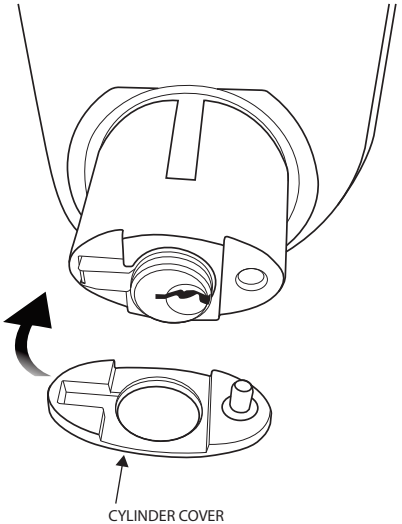

2. Leave the cylinder cover as is, shown.

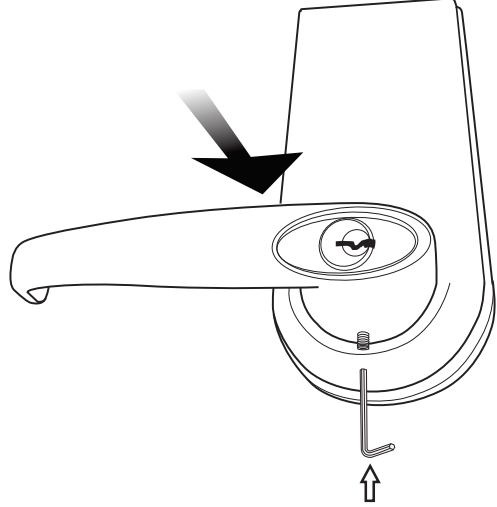

2. Interchange the levers to reverse the handing. Make sure that the set screws are positioned at the bottom. Tighten the set screws.