

FOR LOCATION OF VERTICAL CENTER LINE SEE INSTALLATION INSTRUCTION

TEMPLATE FOR THP4400 ON MAIN CASE

