


Drilling template for 9800, 7700 & 6600 Series exit devices using CRCODE-007 and CRCODE-101

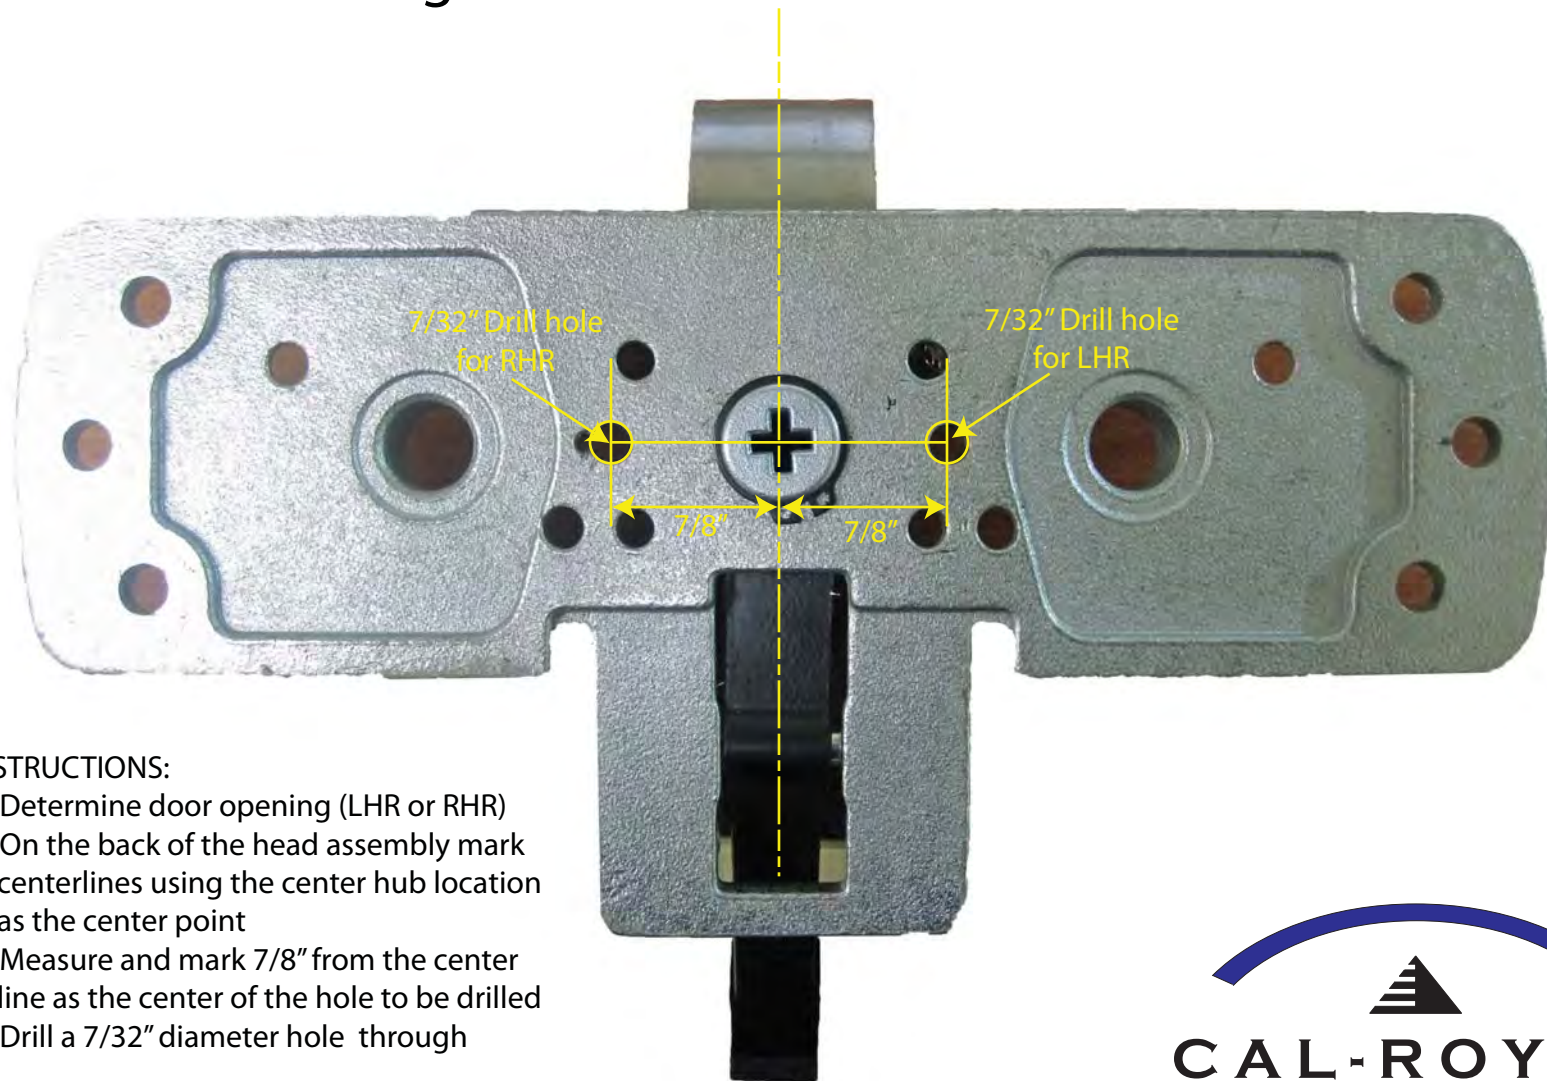

INSTRUCTIONS:

1. Determine door opening (LHR or RHR)
2. On the back of the head assembly mark centerlines using the center hub location as the center point
3. Measure and mark $7/8$ " from the center line as the center of the hole to be drilled
4. Drill a $7/32$ " diameter hole through

