




# Weather Seal Door Accessories

## DSR-407 Door Shoes w/ Rain Drip

### DSR-407 Door Shoes w/ Rain Drip

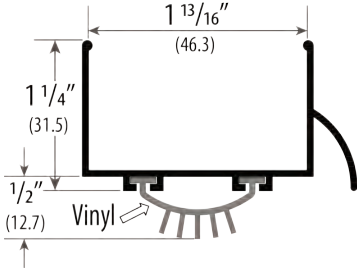

ITEM/FINISH:

DSR-407

LENGTH: 36" & 48"  
VINYL SEAL INSERT  
MILL ALUMINUM &  
DURO FINISH



Packaging includes:


- Screws for  
wood doors - # 6 x 5/8"  
metal doors - # 6 x 5/8"

### Installation Guidelines:

1. Remove the door if necessary to prepare the bottom of the door prior to installation of door shoe.
2. Measure, mark, and trim door shoe exact to the full width of the door. Trim seal 1/16" longer than trimmed door shoe on each end. Crimp ends to secure insert.
3. Drill pilot holes in header stop for the screw at marks.
4. Slide door shoe in place and insert screws.  
Adjust to ensure light even contact with threshold.  
Fasten the screws.

### Tools Required:

- Power tool drill
- Marker
- Measuring tape
- Screw driver
- Cutting tools (Miter saw, circular saw, hacksaw, & plier)

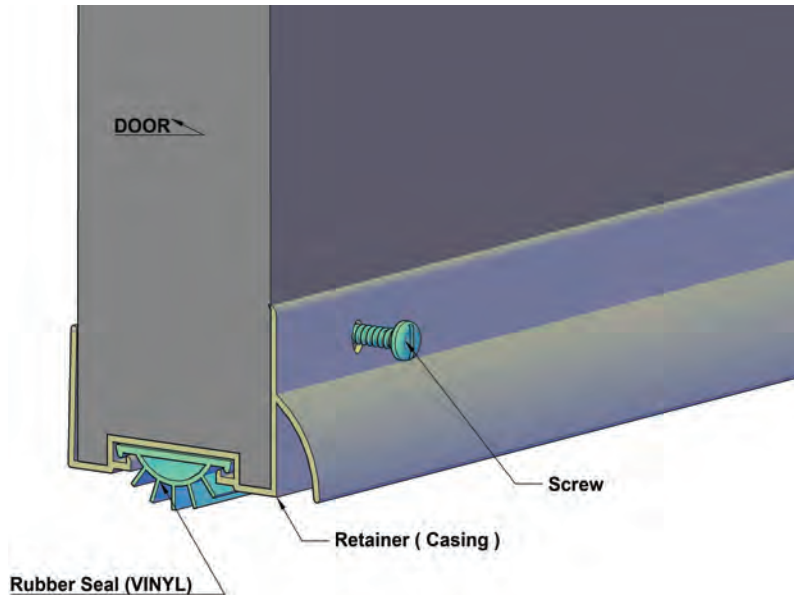

*Important Reminder: Always use appropriate Personal Protective Equipment (PPE) during installation.*

### TESTING / RATINGS:



GASKETING MATERIAL FOR FIRE DOORS INTENDED FOR APPLICATION TO  
UL LISTED STEEL FRAMES AND/OR CLASSIFIED STEEL COVERED COMPOSITE TYPE,  
AND HOLLOW METAL TYPE FIRE DOORS RATED UP TO 3HRS;  
WOOD AND PLASTIC COVERED COMPOSITE TYPE FIRE DOORS RATED UP TO 1-1/2 HRS;  
AND WOOD CORE TYPE FIRE DOORS RATED UP TO 20 MINUTES.  
43ZY