

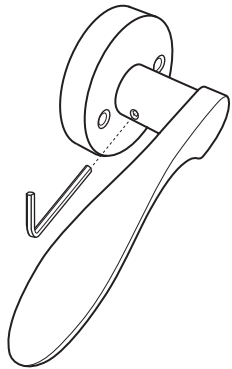


### INSTRUCTIONS ON HOW TO INSTALL PHO-40 DUMMY LEVER

1. Using the allen wrench (supplied), detach the lever from the rose by unscrewing the lock screw to have easy access on installing the mounting screws as shown.

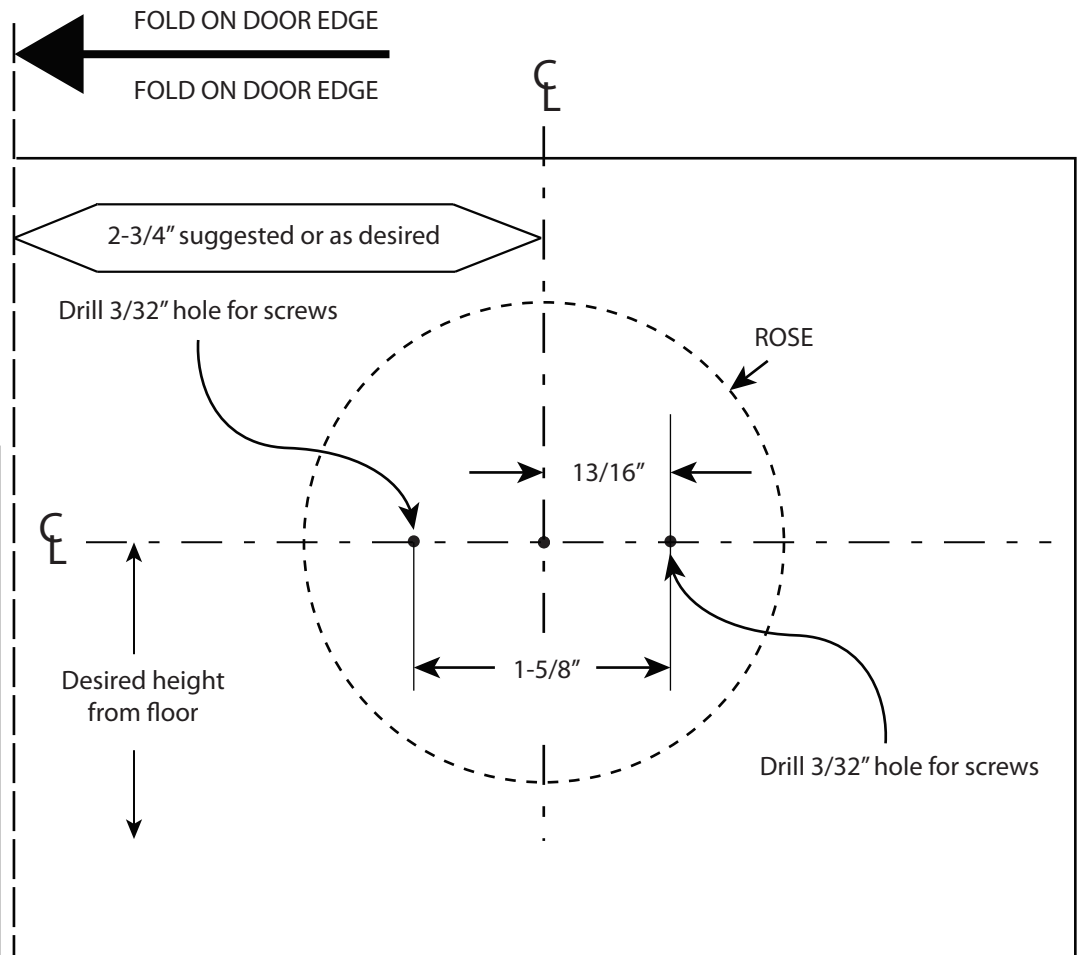

2. Screw the rose to the door then install the lever back.

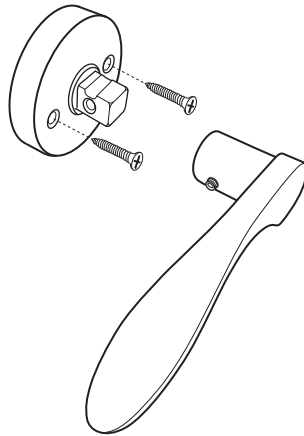

- A. Fold and apply to high edge of door bevel and mark center of desired height from the floor.
- B. Mark center on door face through guide on template for 2-3/4" (70mm) backset or as desired.

NOTE: NO DOOR PREPARATION IS NEEDED EXCEPT FOR THE 2 PILOT HOLES FOR THE SCREWS SUPPLIED.



6605 Flotilla St.  
City of Commerce  
CA 90040 USA  
Tel: (323) 888-6601  
FAX: (323) 888-6699  
Website: cal-royal.com  
Email: sales@cal-royal.com

ITEM NO.	DESCRIPTION	ANSI	SCALE	UNIT	VERSION
PHO-40	CONTEMPORARY SERIES DUMMY LOCKSET	Grade 3	1 : 1	inches (mm)	ver. 1.0 rev. 01/12
			PAGE 1 OF 1		BY: bteves/adg