


STRIKE DIMENSION DETAIL

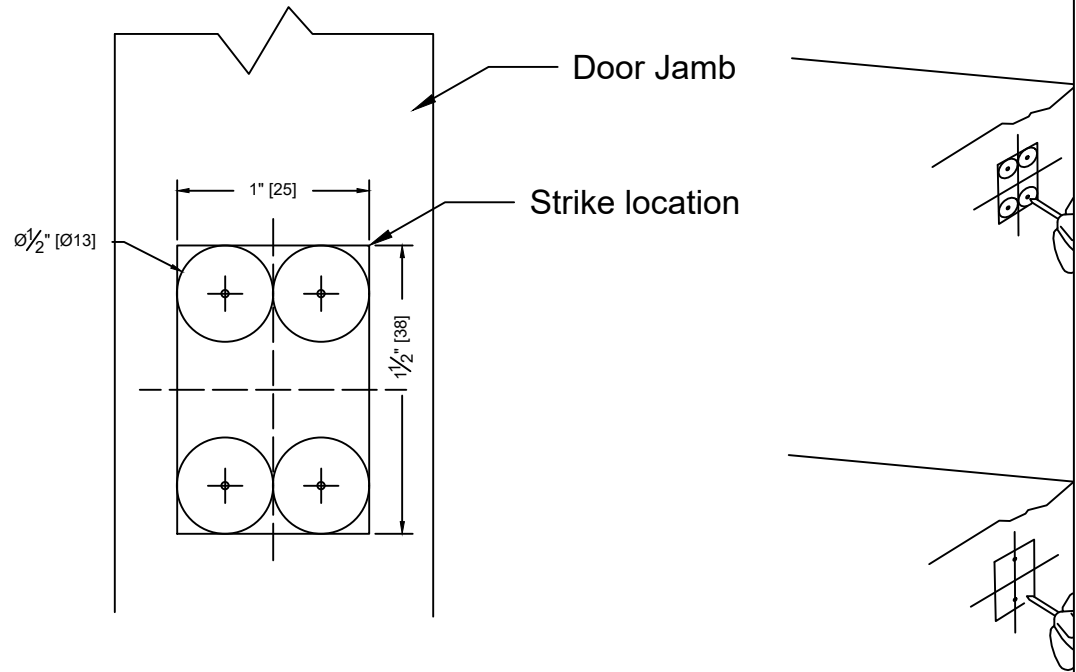

Installation Guideline:

- Place strike template on jamb, aligning centerlines with the centerline drawn. Mark the four center points.
- Drill a 1/2"(13mm) diameter hole 1-1/4" deep at each center point marked. Chisel away any excess wood required to allow strike box to seat in jamb.
- Place strike box in jamb, align strike over strike box and trace outline chisel out area traced, deep enough to allow strike and strike box to install flush with jamb. Place strike box and strike in jamb and mark screw hole centers, where marked drill 3/32" diameter pilot holes. 1"(25mm) deep.

The illustration and technical description in this cut sheet is current as of the date in version date on the right. Cal-Royal Product reserves the right to, and may, on occasions, make changes and/or improvements in designs and dimensions without prior notice.



6605 Flotilla Street
 City of Commerce
 CA 90040 USA
 Tel:# (323) 888-6601
 FAX:# (323) 888-6699
 WEB SITE:
 CAL-ROYAL.COM
 Email: sales@cal-royal.com

ITEM NO.	DESCRIPTION :	NOT TO SCALE	UNIT	Prepared By:	DATE	DWG. NO.
18SDLR/ 20SDLR	STRIKE TEMPLATE FOR 18SDLR / 20 SDLR	PAGE 1 OF 1	PRIMARY DIMENSION SHOWN IN INCHES, DIMENSIONS IN () ARE MM	BBT / AED / CVL	08/18/2022	BHT 7004A
						REV