




# Weather Seal Door Accessories

## **BTSR-107** Door Bottom Sweep w/ Rain Drip


### **BTSR-107** Door Bottom Sweep w/ Rain Drip

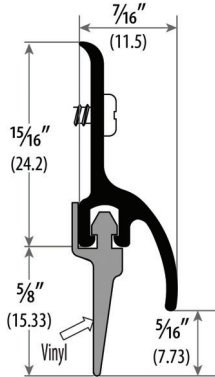

ITEM/FINISH:

### **BTSR-107**

LENGTH: 36" & 48"  
VINYL INSERT  
MILL FINISH ALUMINUM  
& DURO FINISH

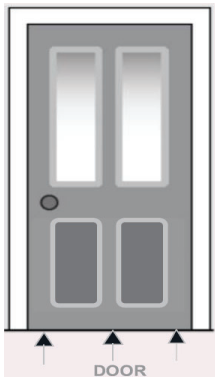

#### Packaging includes:


- Screws for wood and metal doors

#### Installation Guidelines:

1. Determine the required length, mark and cut the the door bottom sweep to full width of the door.
2. Close the door and place door bottom sweep along outside bottom edge of door so that it makes contact with threshold. Mark door in center of slotted holes.
4. Drill pilot holes in door at marks.
5. Fasten door bottom sweep to door with screws.
6. Adjust to ensure firm contact with threshold / above finish floor.

#### Tools Required:

- Power tool drill
- Measuring tape
- Marker
- Screw driver
- Caulking gun
- Cutting tools (hacksaw & plier)

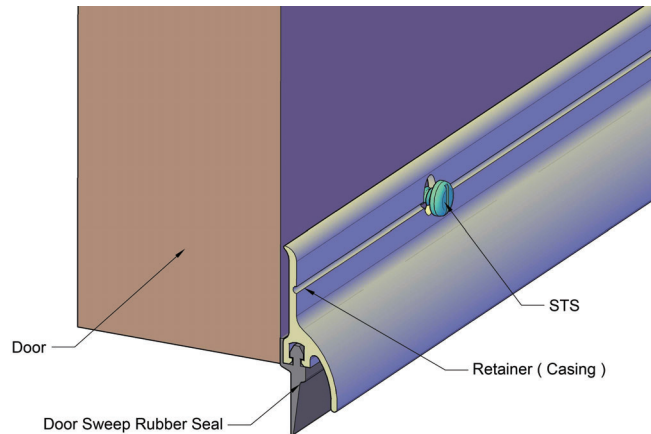

#### **HINT:** "Where to install door sweep?"

Door sweeps are installed on one side of a door to keep out cold drafts. It should be installed on the inside bottom edge of doors that swing into the house, and on the outside bottom edge of doors that swing outwards.

**Important Reminder: Always use appropriate Personal Protective Equipment (PPE) during installation.**

#### TESTING/RATINGS:



Gasketing material for fire doors intended for application to UL listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3hrs; wood and plastic covered composite type fire doors rated up to 1-1/2 hrs; and wood core type fire doors rated up to 20 minutes. 43ZY

#### Fastener :

Screws Size - #6 x 5/8" PPHSMS

# CAL ROYAL

PRODUCTS, INC. U.S.A.

6605 Flotilla Street, City of Commerce, CA 90040 U.S.A.

Website: [www.cal-royal.com](http://www.cal-royal.com) | Email: [sales@cal-royal.com](mailto:sales@cal-royal.com)

Phone: (323) 888-6601 ; (800) 876-9258 | Fax: (323) 888-6699 ; (800) 222-3316