

INSTALLATION INSTRUCTION FOR #418 MULLION


2

SECURE TOP RETAINER TO SURFACE OF TOP STOP



With four No. 14 x 1" flat hd. wood screws

or

With four 1/4"-20 x 5/8" flat hd. mach. screws

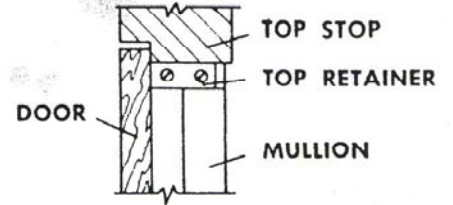

FOR NARROW TRANSOM BARS
— USE ADAPTOR

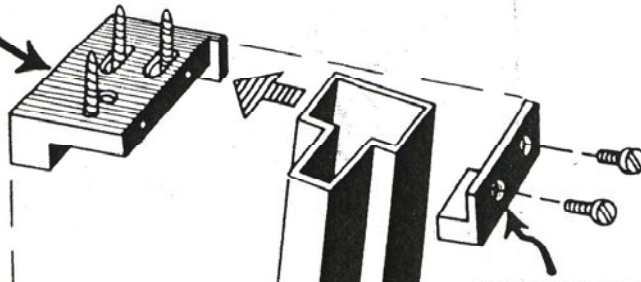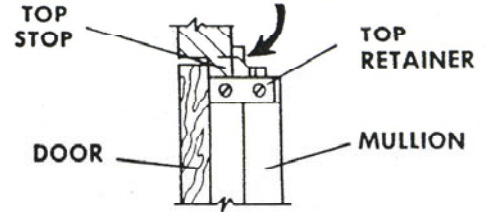

TOP RETAINER CLAMP

MULLION


3

PLACE MULLION IN BOTTOM RETAINER

Cut Top Of Mullion For Correct Fit If Required
Secure Mullion In Place By Tightening Set
Screws In Bottom Retainer And By Screwing
Top Retainer Clamp In Place

Drill and tap for Strike.
Apply Strike.

SECURE BOTTOM RETAINER TO SURFACE
OF FINISHED FLOOR.

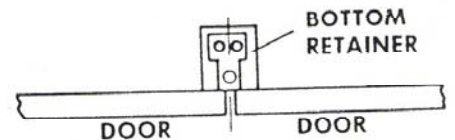

BOTTOM RETAINER



SET SCREWS

ROUND HD. SCREWS

BOTTOM RETAINER

INSIDE EDGE
OF DOOR

1