


# CRB700/800

Fold here and place template on high edge of door bevel

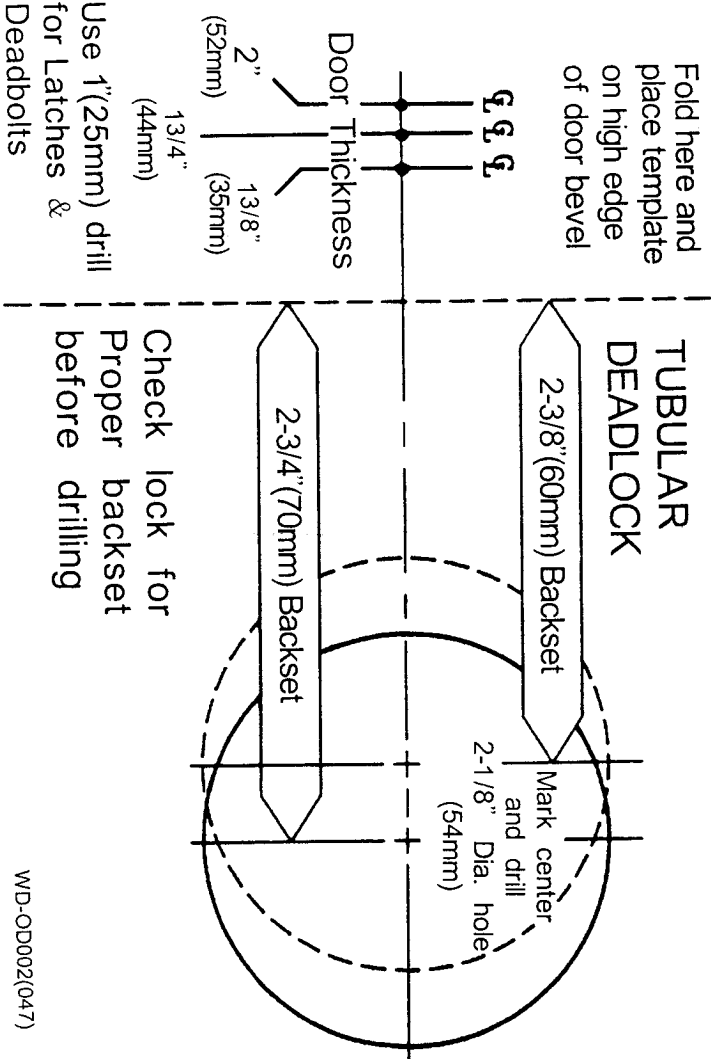

Use 1" (25mm) drill for Latches & Deadbolts

**TUBULAR DEADLOCK**  
Check lock for Proper backset before drilling

WD-OD002(047)