


9800 PANIC RIM TYPE EXIT DEVICE TEMPLATE

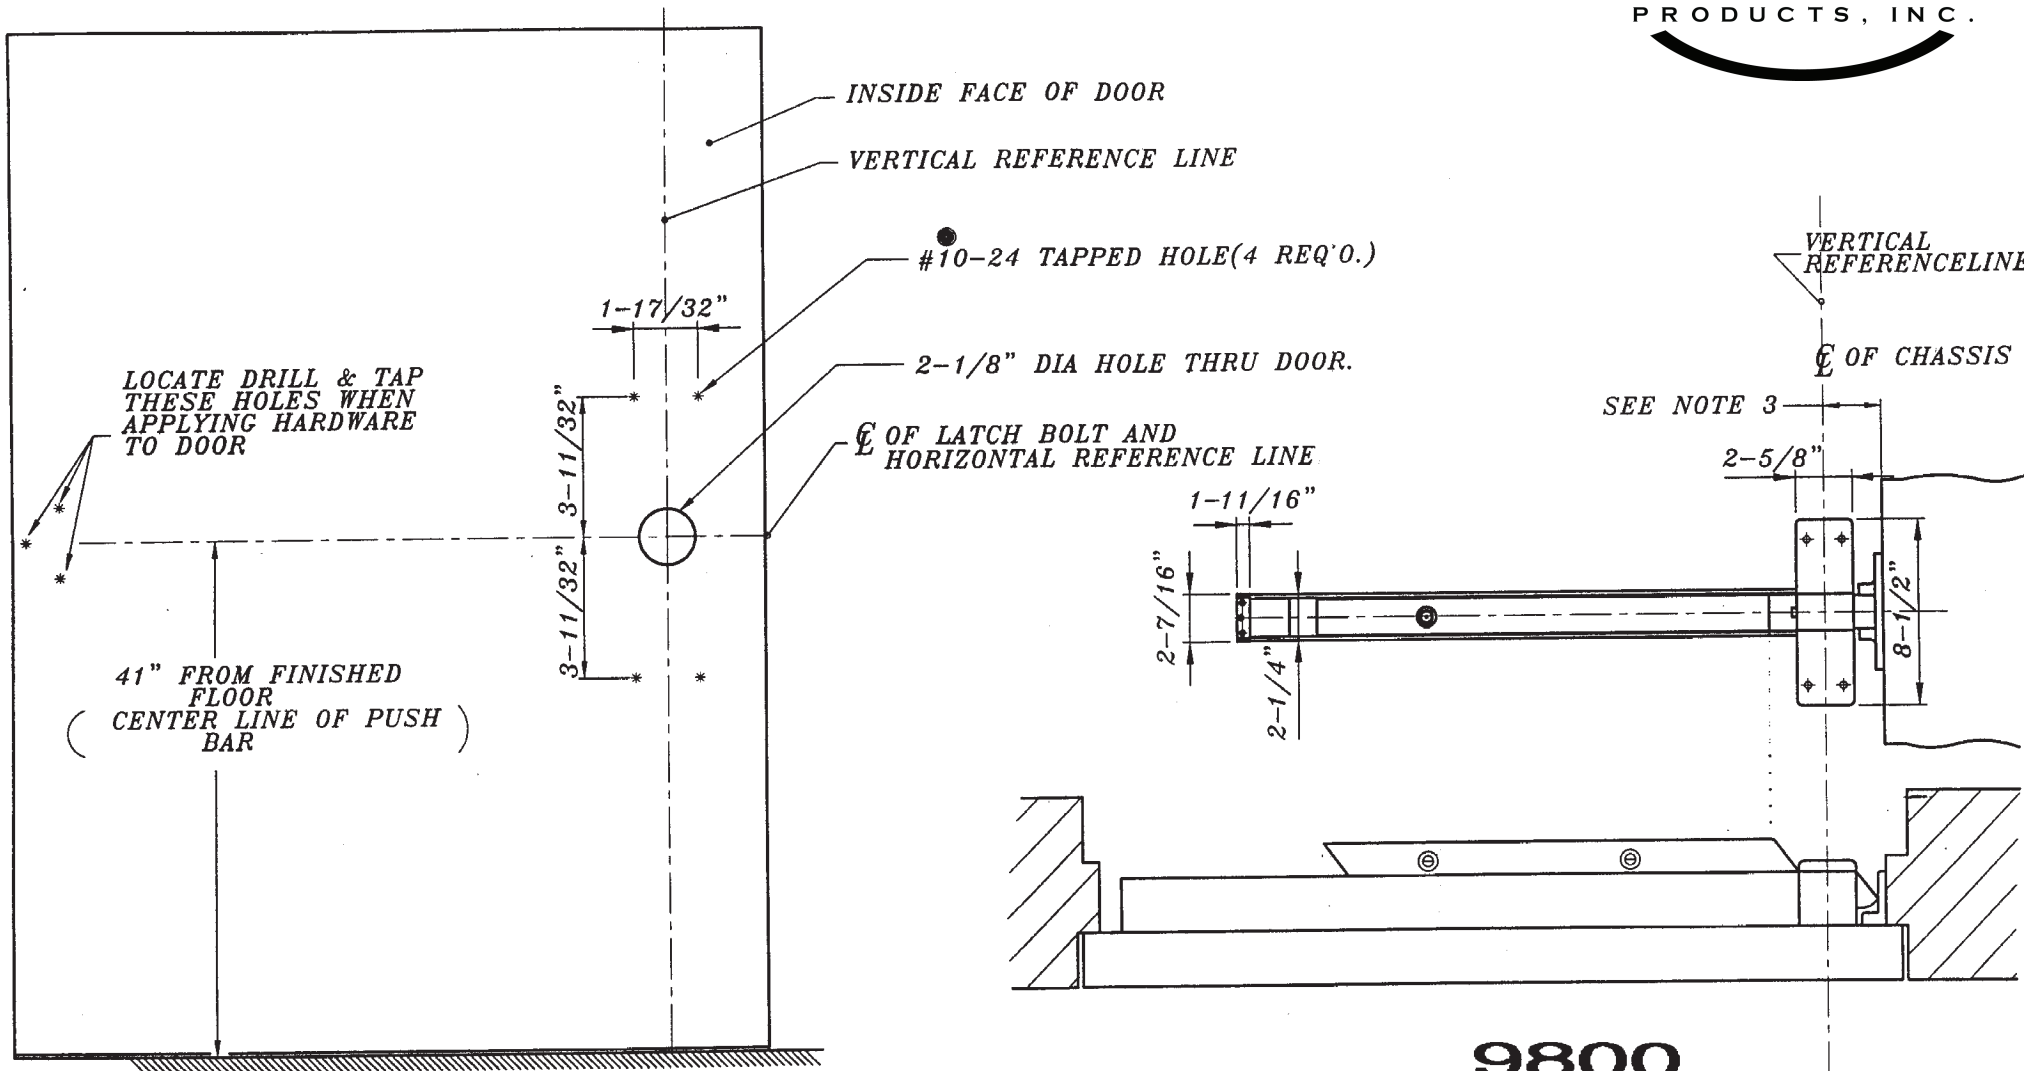

9800

- ⑥ NO ADDITIONAL DOOR PREPARATION IS REQUIRED FOR MOUNTING THE OUTSIDE TRIM
- ⑤ SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED MUST BE FLUSH
- ④ SEE MASTER SHEET FOR AREAS REQUIRING REINFORCEMENTS
- ③ SEE STRIKE TEMPLATE FOR TOP AND BOTTOM STRIKES.
- ②-⑦ WE RECOMMEND THAT ALL TAPPED HOLES BE DRILLED & TAPPED IN FIELD
- ⑦ TOLERANCE ON ALL DIMENSIONS $\pm 1/64$ "

TEMPLATE: PANIC RIM TYPE EXIT DEVICE WITH LEVER TRIM	日期	01.05.04
	檔名	FC-6000