




Weather Seal Door Accessories

BTS-103 Door Bottom Sweep

BTS-103

Door Bottom Sweep


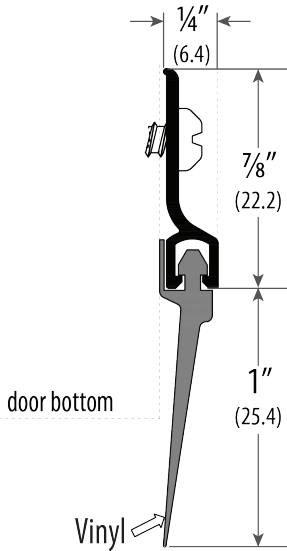


Installation Guidelines:

1. Determine the required length, mark and cut the door bottom sweep to full width of the door.
2. Close the door and place door bottom sweep along outside bottom edge of door so that it makes contact with threshold. Mark door in center of slotted holes.
4. Drill pilot holes in door at marks.
5. Fasten door bottom sweep to door with screws.
6. Adjust to ensure firm contact with threshold / above finish floor.

Tools Required:

- Power tool drill
- Measuring tape
- Marker
- Screw driver
- Caulking gun
- Cutting tools (hacksaw & plier)

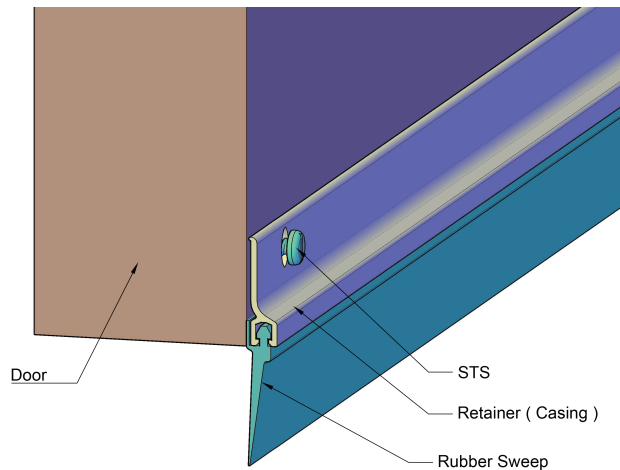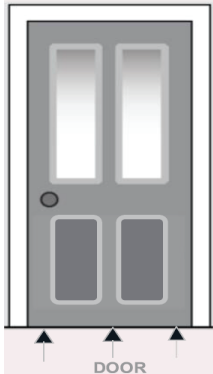

Packaging includes:

- Screws for wood and metal doors

TESTING/RATINGS:



HINT: "Where to install door sweep?"

Door sweeps are installed on one side of a door to keep out cold drafts. It should be installed on the inside bottom edge of doors that swing into the house, and on the outside bottom edge of doors that swing outwards.

Important Reminder: Always use appropriate Personal Protective Equipment (PPE) during installation.

CAL-ROYAL

PRODUCTS, INC. U.S.A.

6605 Flotilla Street, City of Commerce, CA 90040 U.S.A.

Website: www.cal-royal.com | Email: sales@cal-royal.com

Phone: (323) 888-6601 ; (800) 876-9258 | Fax: (323) 888-6699 ; (800) 222-3316