




# Weather Seal Door Accessories


## DS-404 Door Shoes

### DS-404 Door Shoes

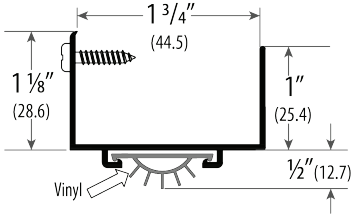

#### Installation Guidelines:

1. Remove the door if necessary to prepare the bottom of the door prior to installation of door shoe.
2. Measure, mark, and trim door shoe exact to the full width of the door. Trim seal 1/16" longer than trimmed door shoe on each end. Crimp ends to secure insert.
3. Drill pilot holes in header stop for the screw at marks.
4. Slide door shoe in place and insert screws. Adjust to ensure light even contact with threshold. Fasten the screws.

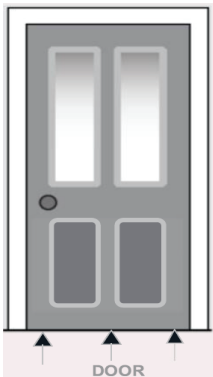


#### Tools Required:

- Power tool drill
- Marker
- Measuring tape
- Screw driver
- Cutting tools (Miter saw, circular saw, hacksaw, & plier)

#### Packaging includes:

- Screws for wood and metal doors

#### TESTING/RATINGS:

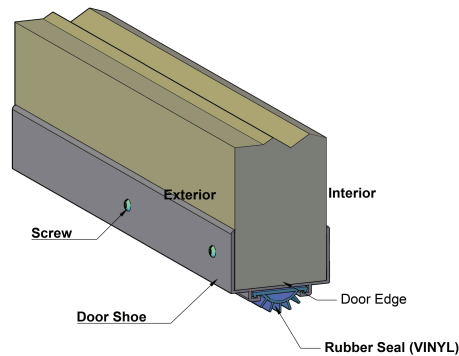

**Important Reminder: Always use appropriate Personal Protective Equipment (PPE) during installation.**

# CAL-ROYAL

PRODUCTS, INC. U.S.A.

6605 Flotilla Street, City of Commerce, CA 90040 U.S.A.  
Website: [www.cal-royal.com](http://www.cal-royal.com) | Email: [sales@cal-royal.com](mailto:sales@cal-royal.com)  
Phone: (323) 888-6601 ; (800) 876-9258 | Fax: (323) 888-6699 ; (800) 222-3316