


Drilling template for 9800 and 7700 Series exit devices using CRCODE-007 and CRCODE-101

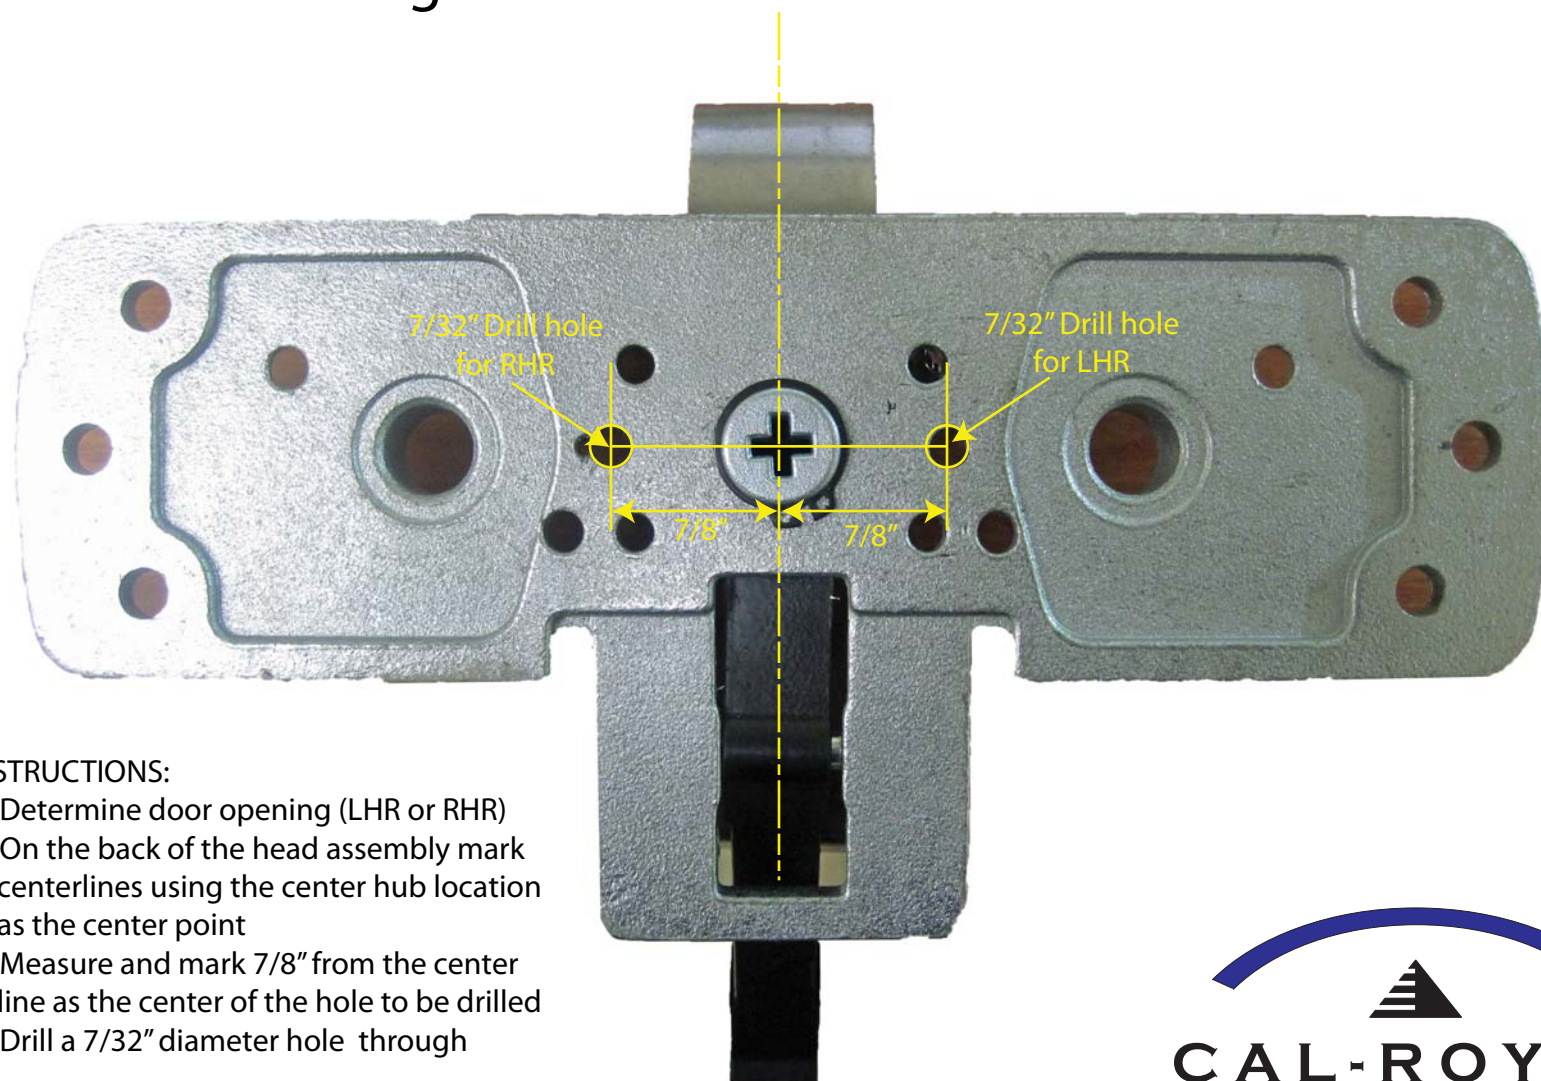

INSTRUCTIONS:

1. Determine door opening (LHR or RHR)
2. On the back of the head assembly mark centerlines using the center hub location as the center point
3. Measure and mark 7/8" from the center line as the center of the hole to be drilled
4. Drill a 7/32" diameter hole through

