


IMPORTANT

CR3000 WIRE CONNECTIONS

1. Connect the red/black wires to the battery connector (red/black wires)
2. Hook the motor wires (black shielding) on the LEFT wire hooks on the bottom of the battery case and mounting plates for RH opening (or on the RIGHT for LH opening) and connect to the motor connector (black shielding)
3. Push back the slack of the connected wires inside the 1" hole of the battery plate as much as it can accommodate
- 4 This procedure is **IMPORTANT** to avoid pinching of the wires when the interior lock cover is installed

CR3000 PCB TERMINAL CONNECTION GUIDE

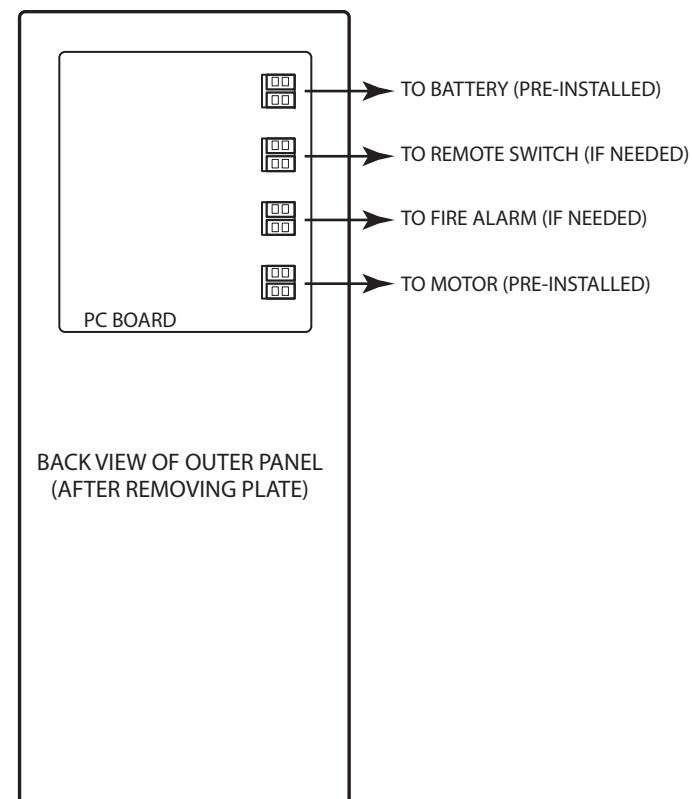

6605 Flotilla St.
City of Commerce CA 90040 USA
Tel: (323) 888-6601 Fax: (323) 888-6699
Email: sales@cal-royal.com
Website: www.cal-royal.com