



INSTALLATION INSTRUCTION FOR A22EO SERIES RIM EXIT DEVICE

BEFORE INSTALLING DEVICE, PLEASE CHECK:

- IF DOOR FITTED AND HUNG.
SIZE OF EXIT DEVICE, FUNCTION AND DESIGN...
2.1 36" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 30" WIDE.
2.2 48" DOORS, CAN BE CUT TO FIT DOORS DOWN TO 36" WIDE.
2.3 HAND OF DEVICE AGAINST APPLICATION.

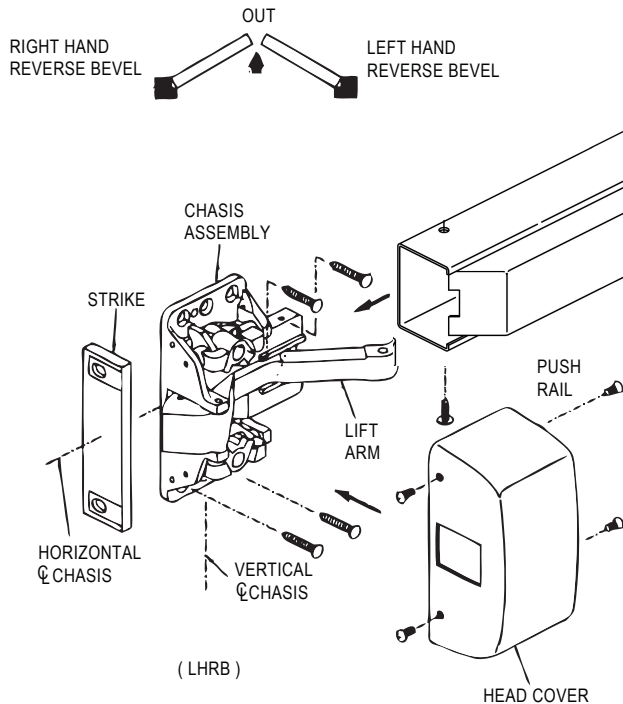


2. APPLY TRIM + CHASSIS

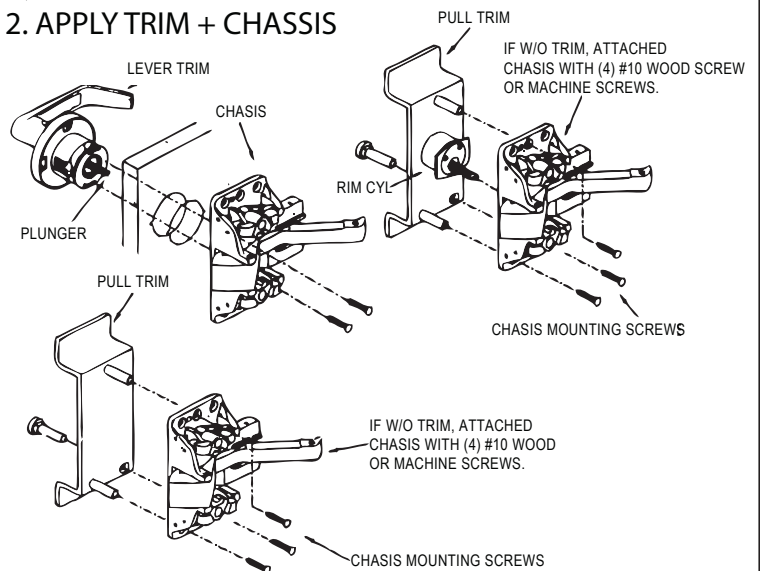


1. PREPARE DOOR


1. FOR 2-1/8" Ø BORE PREP
POSITION TEMPLATE OVER EXISTING
HOLE AND MARK FOR TWO CHASSIS
MOUNTING SREW HOLES.

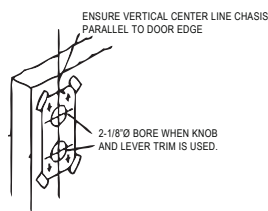

2. FOR DOOR W/O BORE PREP, MARK VERTICAL CENTER LINE
CHASSIS AND HORIZONTAL CENTER LINE CHASSIS USING
DIMENSION BELOW

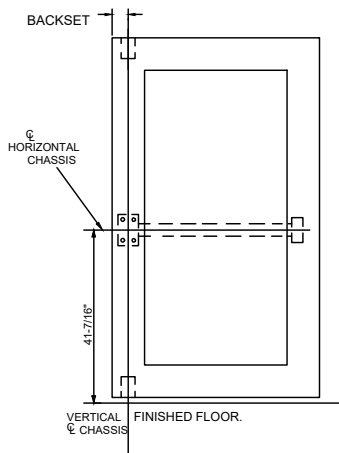


IDENTIFY TYPE OF INSTALLATION
TO DETERMINE LOCATION OF
VERTICAL ϕ

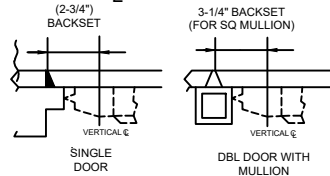

3. APPLY RAIL ASSEMBLY

1. CHASSIS THE SIZE OF DEVICE, IF CUTTING TO LENGTH
IS REQUIRED.
2. DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1-3/4"
FROM "Y". MARK CUT OFF POINT ON MOUNTING RAIL.
3. DEPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO
CHASSIS. LEVEL RAIL AND FASTEN CHASSIS AND MOUNTING
PLATE.

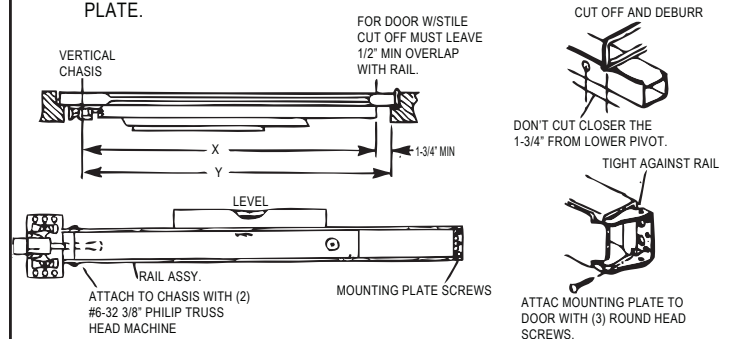

4. APPLY COVER AND STRIKES

