
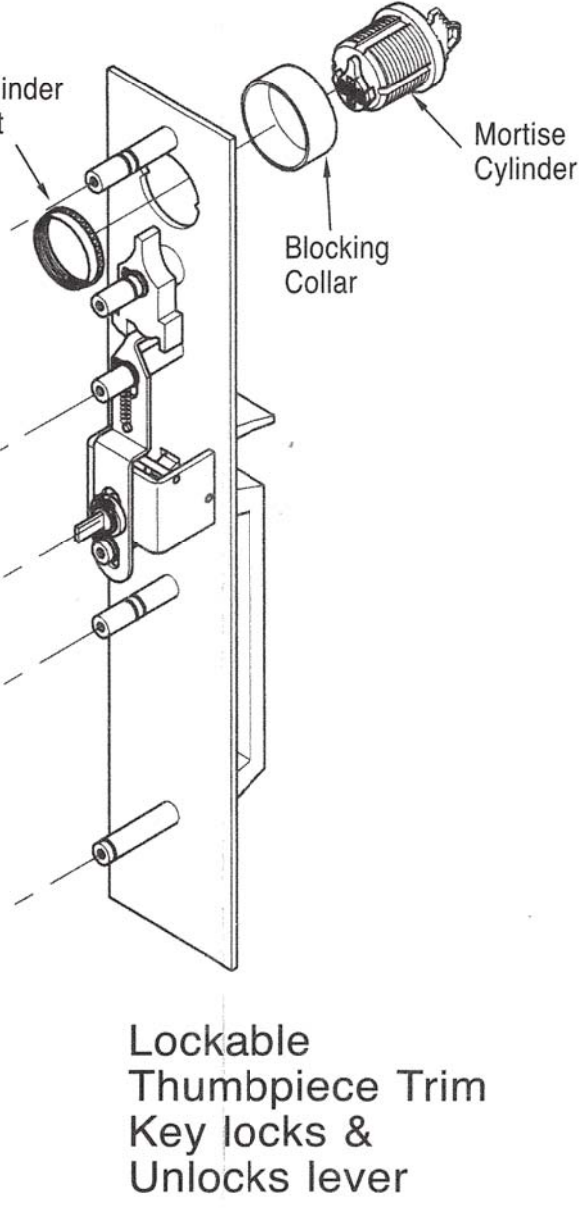
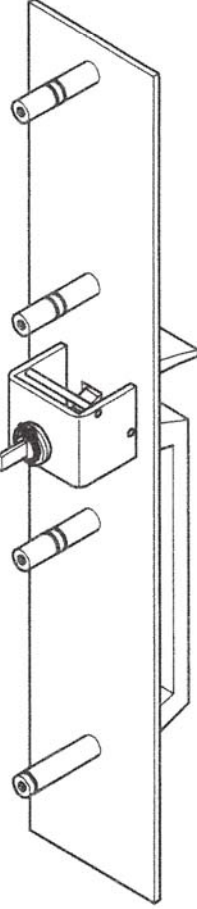
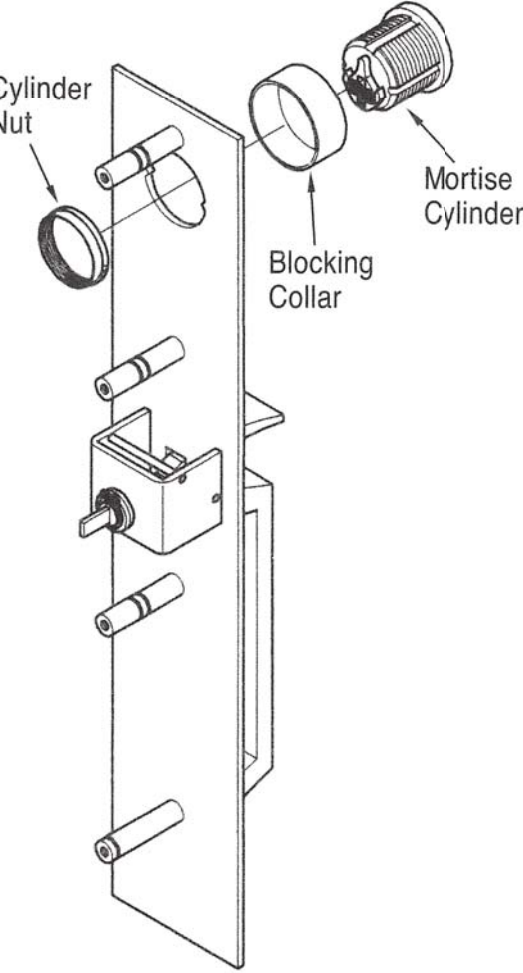


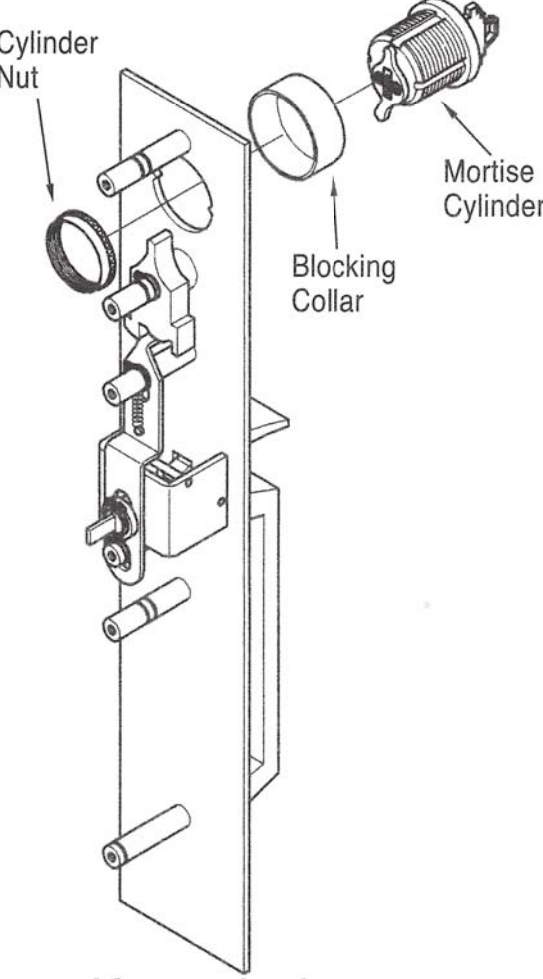

# INSTRUCTIONS FOR CAL-ROYAL THUMBPIECE OUTSIDE TRIM

## For 2200/2260V series Rim & Vert Rod Device

THP-00	THP-30	THP-40	THP-05
 <p data-bbox="770 1332 1112 1499">Lockable Thumbpiece Trim Key locks &amp; Unlocks lever</p>	 <p data-bbox="1370 1332 1609 1459">No Cyl, Trim Always Operable</p>	 <p data-bbox="1889 1306 2209 1514">Pull When Push bar locked down. Dummy Thumbpiece Trim</p>	 <p data-bbox="2427 1272 2769 1528">Key unlock Thumbpiece key remained on cyl unless locked. Cyl Thumbpiece trim</p>
<p data-bbox="832 1554 1050 1641">13 function Entrance</p>	<p data-bbox="1392 1554 1609 1641">15 function Passage</p>	<p data-bbox="1930 1554 2147 1641">10 function Dummy</p>	<p data-bbox="2480 1554 2707 1641">04 function Storeroom</p>
<p data-bbox="739 1681 1121 2003">ATTACH THE COLLAR AND MORTISE CYLINDER TO THE TRIM PLATE WITH THE MORTISE NUT. ATTACH TRIM TO DOOR THRU BOLTING (2) SCREWS TO THE CHASSIS &amp; THE (2) CUP WASHERS AND SCREWS AT THE TOP &amp; BOTTOM TO THE DOOR</p>	<p data-bbox="1317 1681 1665 1911">ATTACH TRIM TO DOOR THRU BOLTING THE (2) SCREWS TO THE CHASSIS &amp; (2) CUP WASHERS AND SCREWS AT THE TOP &amp; BOTTOM TO THE DOOR.</p>	<p data-bbox="1867 1681 2216 1911">ATTACH TRIM TO DOOR THRU BOLTING THE (2) SCREWS TO THE CHASSIS &amp; (2) CUP WASHERS AND SCREWS AT THE TOP &amp; BOTTOM TO THE DOOR.</p>	<p data-bbox="2396 1681 2778 2003">ATTACH THE COLLAR AND MORTISE CYLINDER TO THE TRIM PLATE WITH THE MORTISE NUT. ATTACH TRIM TO DOOR THRU BOLTING (2) SCREWS TO THE CHASSIS &amp; THE (2) CUP WASHERS AND SCREWS AT THE TOP &amp; BOTTOM TO THE DOOR</p>