


MB4250 MOUNTING BRACKET INSTALLATION INSTRUCTIONS


1. MB4250 may be supplied with DORCO Coordinator.
2. Aling edge of door applied hardware $\frac{15}{16}$ " lower to allow the coordinator to fit between the frame and mounting bracket.
3. Install door applied hardware is $\frac{15}{16}$ " lower to allow the Coordinator to fit between the frame and mounting brackets.

MB4250 mounting Bracket for stop widths over 2-1/4".

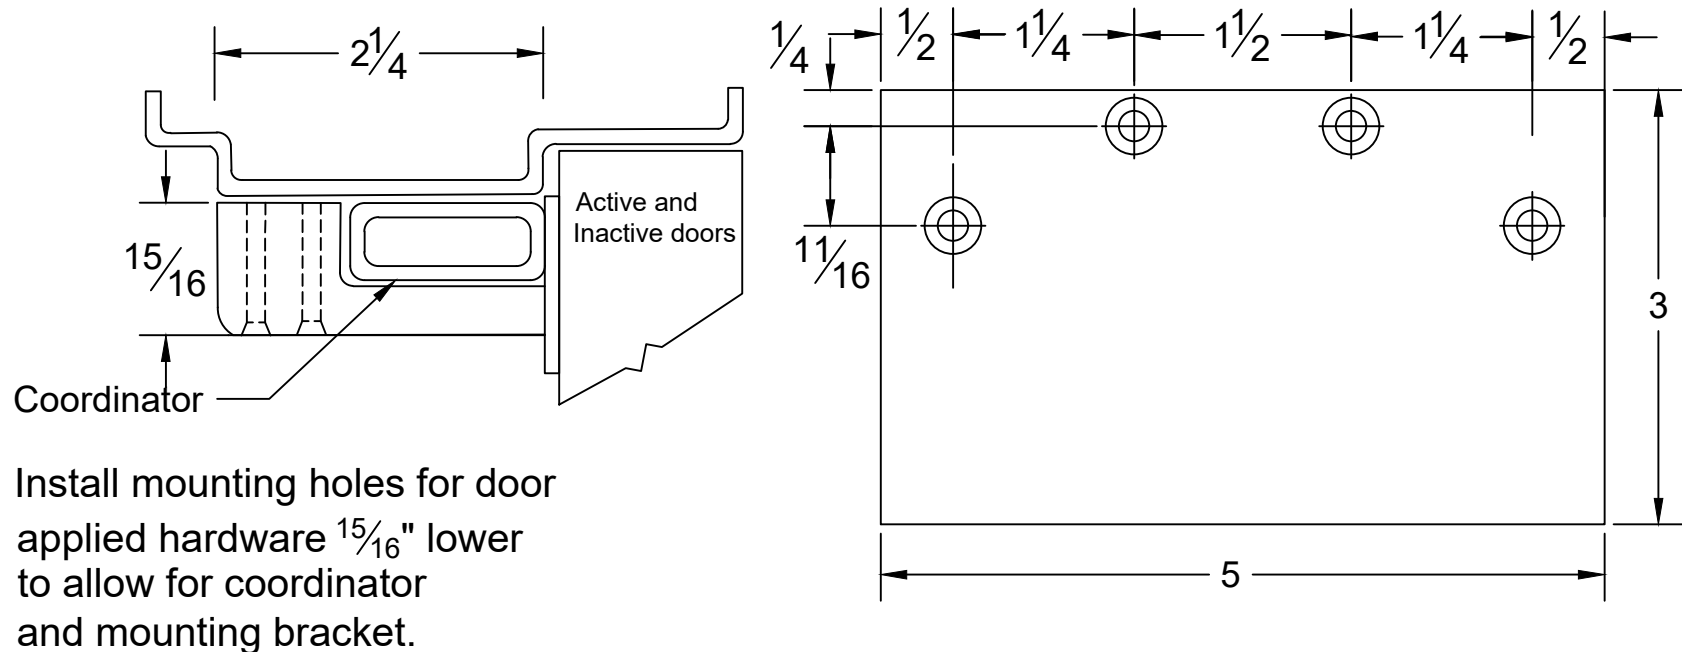

Install mounting holes for door applied hardware $\frac{15}{16}$ " lower to allow for coordinator and mounting bracket.

The illustration and technical description in this cut sheet is current as of the date in version date on the right. Cal-Royal Product reserves the right to, and may, on occasions, make changes and/or improvements in designs and dimensions without prior notice.

	6605 Flotilla Street City of Commerce CA 90040 USA Tel.# (323) 888-6601 FAX # (323) 888-6699 WEB SITE: CAL-ROYAL.COM Email: sales@cal-royal.com	ITEM NO.	DESCRIPTION :	NOT TO SCALE	UNIT	Prepared By:	DATE	DWG. NO.
		MB4250	Mounting Bracket Installation Instruction	PAGE 1 OF 1	PRIMARY DIMENSION SHOWN IN INCHES	BBT / ADG / CVL	09/11/2024	BHG-7280-09/24-1 of 1
								REV