



MB4750 MOUNTING BRACKET INSTALLATION INSTRUCTIONS:

1. MB4750 may be supplied with DORCO Coordinator.
2. Aline edge of door stop and edge of bracket. Mount bracket as shown using supplied screws.
3. Install door applied hardware is $\frac{15}{16}$ " lower to allow the Coordinator to fit between the frame and mounting brackets.

MB4750 mounting Bracket for stop widths over $\frac{7}{8}$ " to $2\frac{1}{4}$ ".

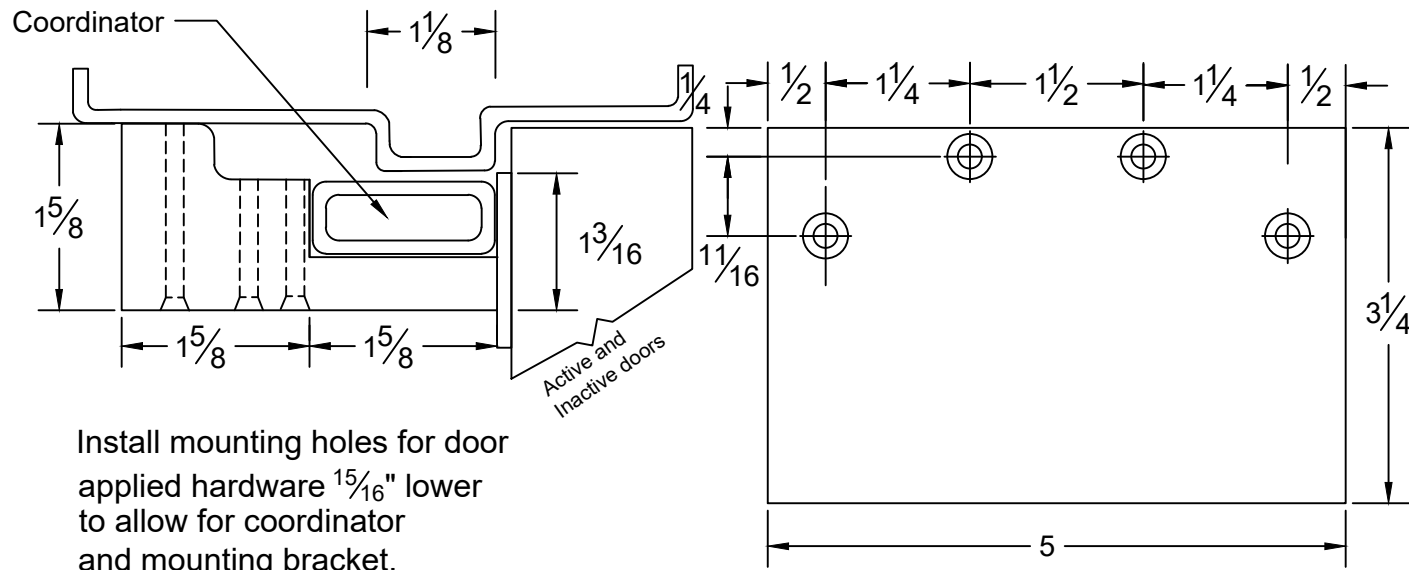

Install mounting holes for door applied hardware $\frac{15}{16}$ " lower to allow for coordinator and mounting bracket.

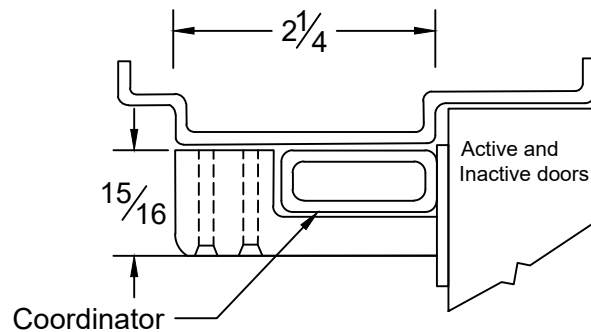

The illustration and technical description in this sheet is current as of the date in version date on the right. Cal-Royal Product reserves the right to, and may, on occasions, make changes and/or improvements in designs and dimensions without prior notice.



6605 Flotilla Street
City of Commerce
CA 90040 USA
Tel.# (323) 888-6601
FAX.# (323) 888-6699
WEB SITE:
CAL-ROYAL.COM
Email: sales@cal-royal.com

ITEM NO.	DESCRIPTION :	NOT TO SCALE	UNIT	Prepared By:	DATE	DWG. NO.
MB4250	Mounting Bracket Installation Instruction	PAGE 1 OF 1	PRIMARY DIMENSION SHOWN IN INCHES, DIMENSIONS IN () ARE MM	BBT / ADG / CVL	09/11/2024	BHG-0000-MM/YR-1 of 1
						REV