



INSTALLATION INSTRUCTION FOR ALBR9860V SERIES PRODUCTS, INC. PANIC VERTICAL ROD EXIT DEVICE.

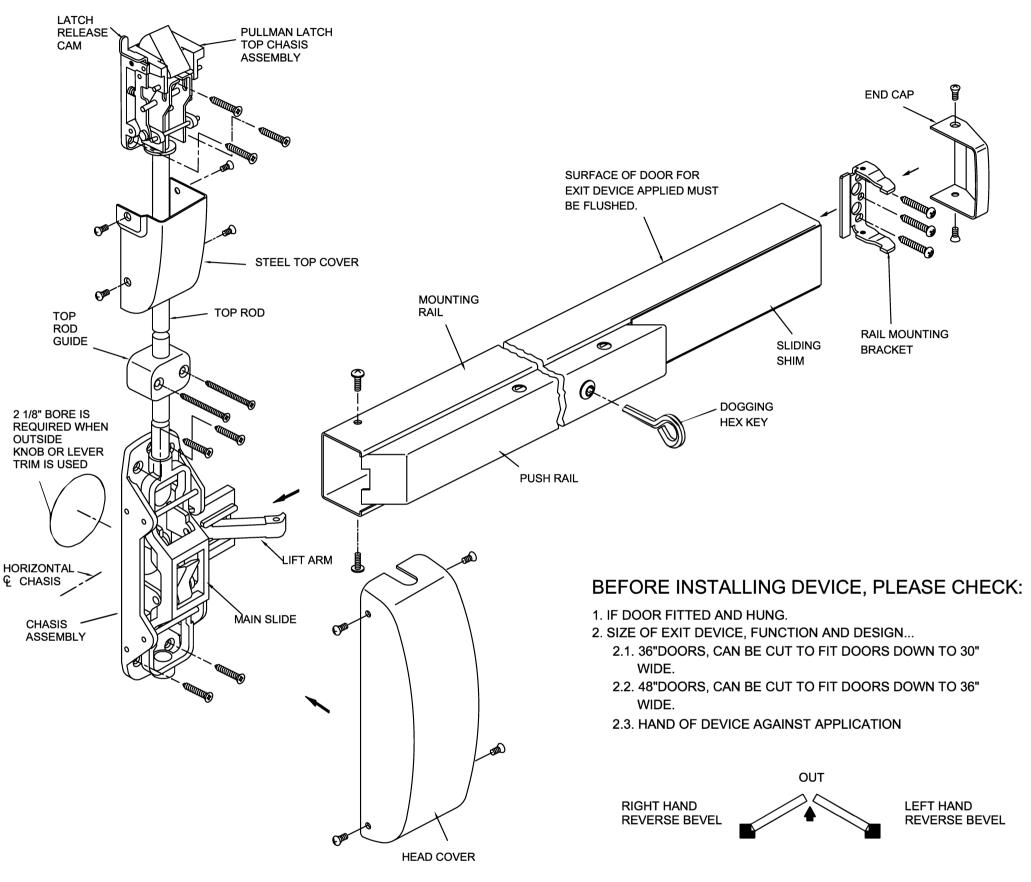

STEEL BOTTOM COVER

TO CHANGE HAND OF A9860V EXIT DEVICE.

- 1.REMOVE CHASSIS PINS AND MAIN SLIDE.
- 2.REMOVE LIFT LEVER PIN AND LIFT LEVER.
- $3.\mathsf{REASSEMBLE}$ LIFT LEVER AT OPPOSITE SIDE, AS SHOWN.
- 4.REPLACE MAIN SLIDE AND CHASSIS PINS.

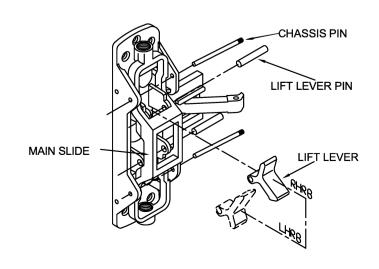


1. MARK VERTICAL AND HORIZONTAL REFERENCE LINE ON DOOR.


DETERMINE BACKSET TO LOCATE VERTICAL REFERENCE LINE.

1. IF LOCK STILE IS 4-1/2" WIDE OR WIDER,
BACKSET IS 2-3/4".

2. IF LOCK STILE IS LESS THAN 4-1/2" WIDE, BACKSET IS HALF OF THE EXPOSED WIDTH OF LOCK STILE.

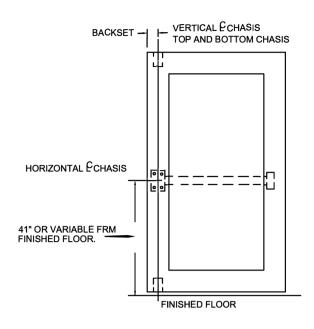


4. ATTACH TOP CHASIS

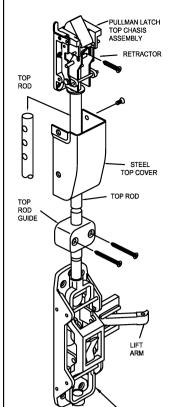


- TOP DOOR STRIKE
- 1. MOUNT TOP STRIKE PER LOCATION IN 2ND STEP.
- 2. SCREW TOP ROD INTO MAIN SLIDE.
- 3. SLIDE GUIDE AND COVER ON TO TOP ROD CHASIS BY INSERTING ADJ PIN. THRU RETRACTOR AND MIDDLE HOLE IN ROD. (SEE FIG AT LEFT) ADJ TOP CHASIS MOUNTING HOLES LINE UP WITH LOCATION MARKED IN 2ND. STEP.
- 4. MOUNT BOTTOM CHASIS SAME WAY AS TOP CHASIS (SEE FIG AT RIGHT)
- 5. ASTO BOTTOM STRIKE APPLCATION VARIATIONS.
 PLEASE REFER FIG BELOW FOR THE CORRECT
 MARRIAGE
- 6. FASTEN GUIDE.
 IF SHORTER ROD REQUIRED, CUT TO LENGTH
- AND DRILL 1/8" HOLE THRU.

2. PREPARE DOOR

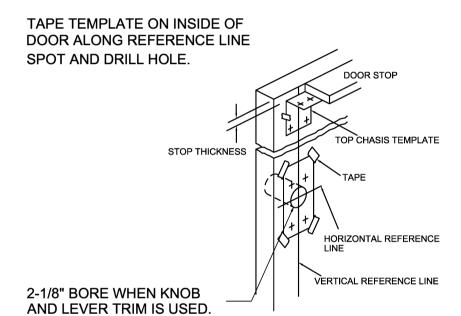


5. APPLY RAIL ASSEMBLE


- 1. CHECK THE SIZE OF DEVICE, IF CUTTING TO LENGTH IS REQUIRED.
- 2. DETERMINE CUT OFF LENGTH "X" BY SUBTRACTING 1-3/4" FROM "Y", MARK CUT OFF POINT ON MOUNTING RAIL.

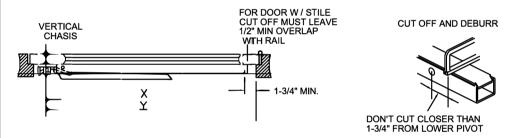

3. DEPRESS ARM INTO RAIL OPENING AND SLIDE RAIL ONTO CHASIS. LEVEL RAIL AND FASTEN CHASIS AND MOUNTING

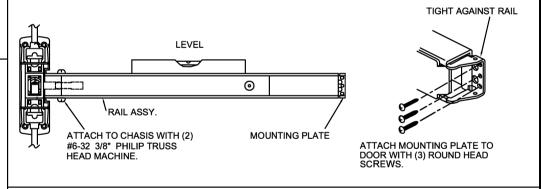

3. APPLY HARDWARE

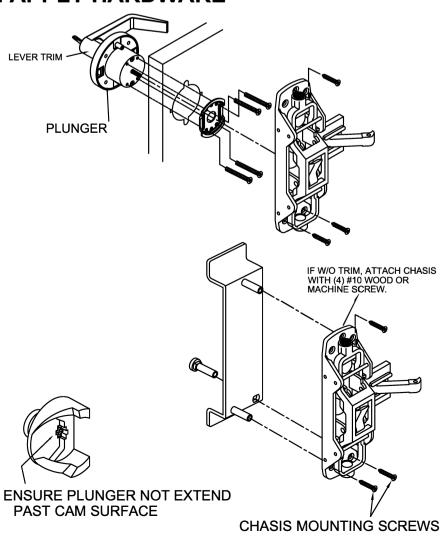

6. APPLY COVER

