



## VT51 Vinyl Thresholds

### ITEM INFO:

#### VT51

Length: **36", 48", 73"**

Finish: **BLACK or DURO**


### Tools Required:

- Marker
- Measuring tape
- Caulking gun
- Cutting tools ( Miter saw, circular saw, hacksaw)

### Applications:

Must be used as a center section for:

- ① 2pcs of VT38, or
- ② 1pc VT38 and 1pc VT49

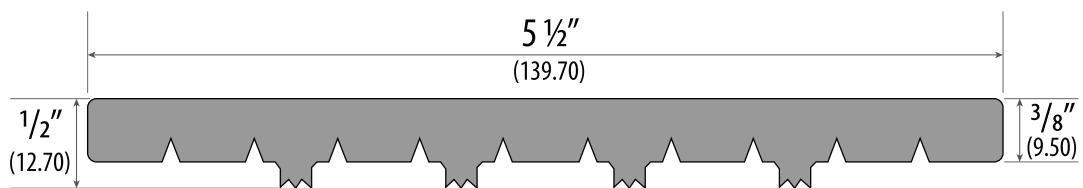


### Installation Guidelines:

1. Measure door opening at the sill by measuring the width of both rabbets.
2. Transfer measurement to threshold.
3. Cut the threshold to length. Notch ends of the threshold to fit around the stop on the door frame as necessary.
4. Trial fit the threshold to verify proper fit. Cut down if necessary.

Note: If using the threshold with carpet, insert carpet first into the threshold opening before fitting it into place at the sill.

5. Apply glue to concrete or plywood sub floors before setting the vinyl threshold in place.

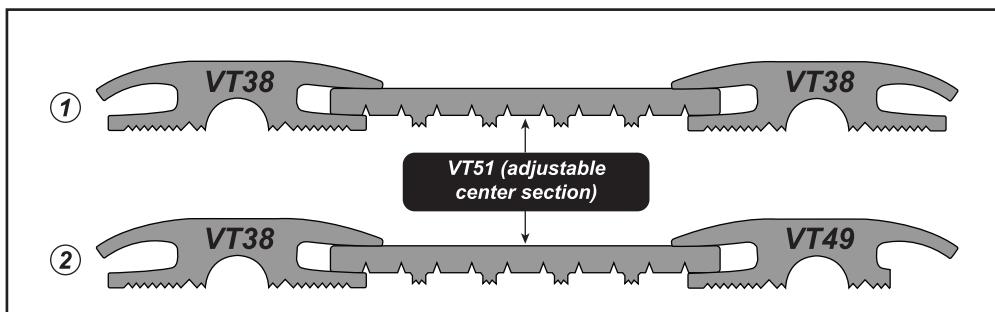

### TESTING / RATINGS:



GASKETING MATERIAL FOR FIRE DOORS INTENDED FOR APPLICATION TO  
UL LISTED STEEL FRAMES AND/OR CLASSIFIED STEEL COVERED COMPOSITE TYPE,  
AND HOLLOW METAL TYPE FIRE DOORS RATED UP TO 3HRS;  
WOOD AND PLASTIC COVERED COMPOSITE TYPE FIRE DOORS RATED UP TO 1-1/2 HRS;  
AND WOOD CORE TYPE FIRE DOORS RATED UP TO 20 MINUTES.  
43ZY

Top (plan) view of door opening (out-swing type)

