


1. Trim door to fit opening, 11/16" (17mm) less than height, 1/4" (6mm) less than width.

- 2. Round off hinge stile of door to 1-1/2" (38mm) radius.
- 3. Cut mortise for hinge full thickness of door as shown.
- 4. Center spring on door and screw it in place, attaching end plate with it.
- 5. Install top pivot to head jamb and top socket to door as shown.
- 6. Tilt door to engage pivots, align door, wedge in place and screw floor plate to floor. (Sloted holes in plate permit adjustments).
- 7. Slip tab end of side cover under end plate and screw side cover to door.

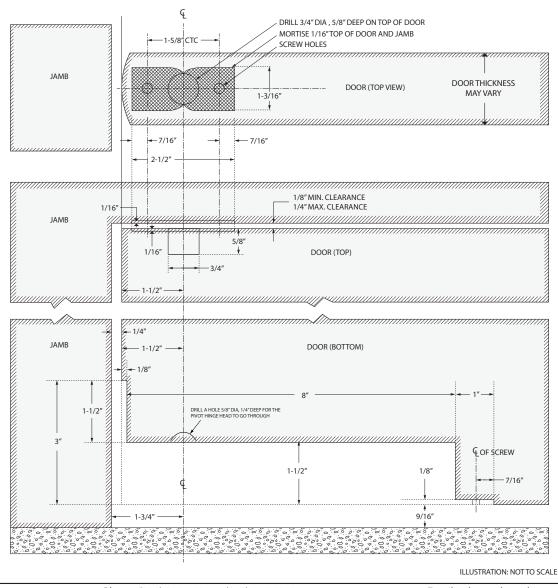

CAL-ROYAL PRODUCTS, INC. 6605 Flotilla St, City of Commerce California, 90040 U.S.A.

Phone: (323) 888-6601 • (800) 876-9258 Fax: (323) 888-6699 • (800) 222-3316

Email: sales@cal-roval.com

Inall. sales@cal-lOya	I.COIII
Website: www.cal-roy	/al.com