
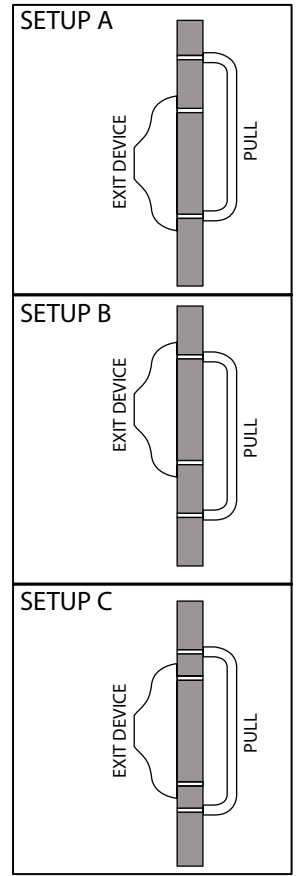


TEMPLATE FOR GLSRIM7700 & GLSRIM9800 WITH OFSTPUL-10

IMPORTANT: ATTACH STRIKE TO FRAME OR MULLION BEFORE POSITIONING TEMPLATE ON DOOR, LOCATE TEMPLATE FROM SURFACE OF STRIKE.

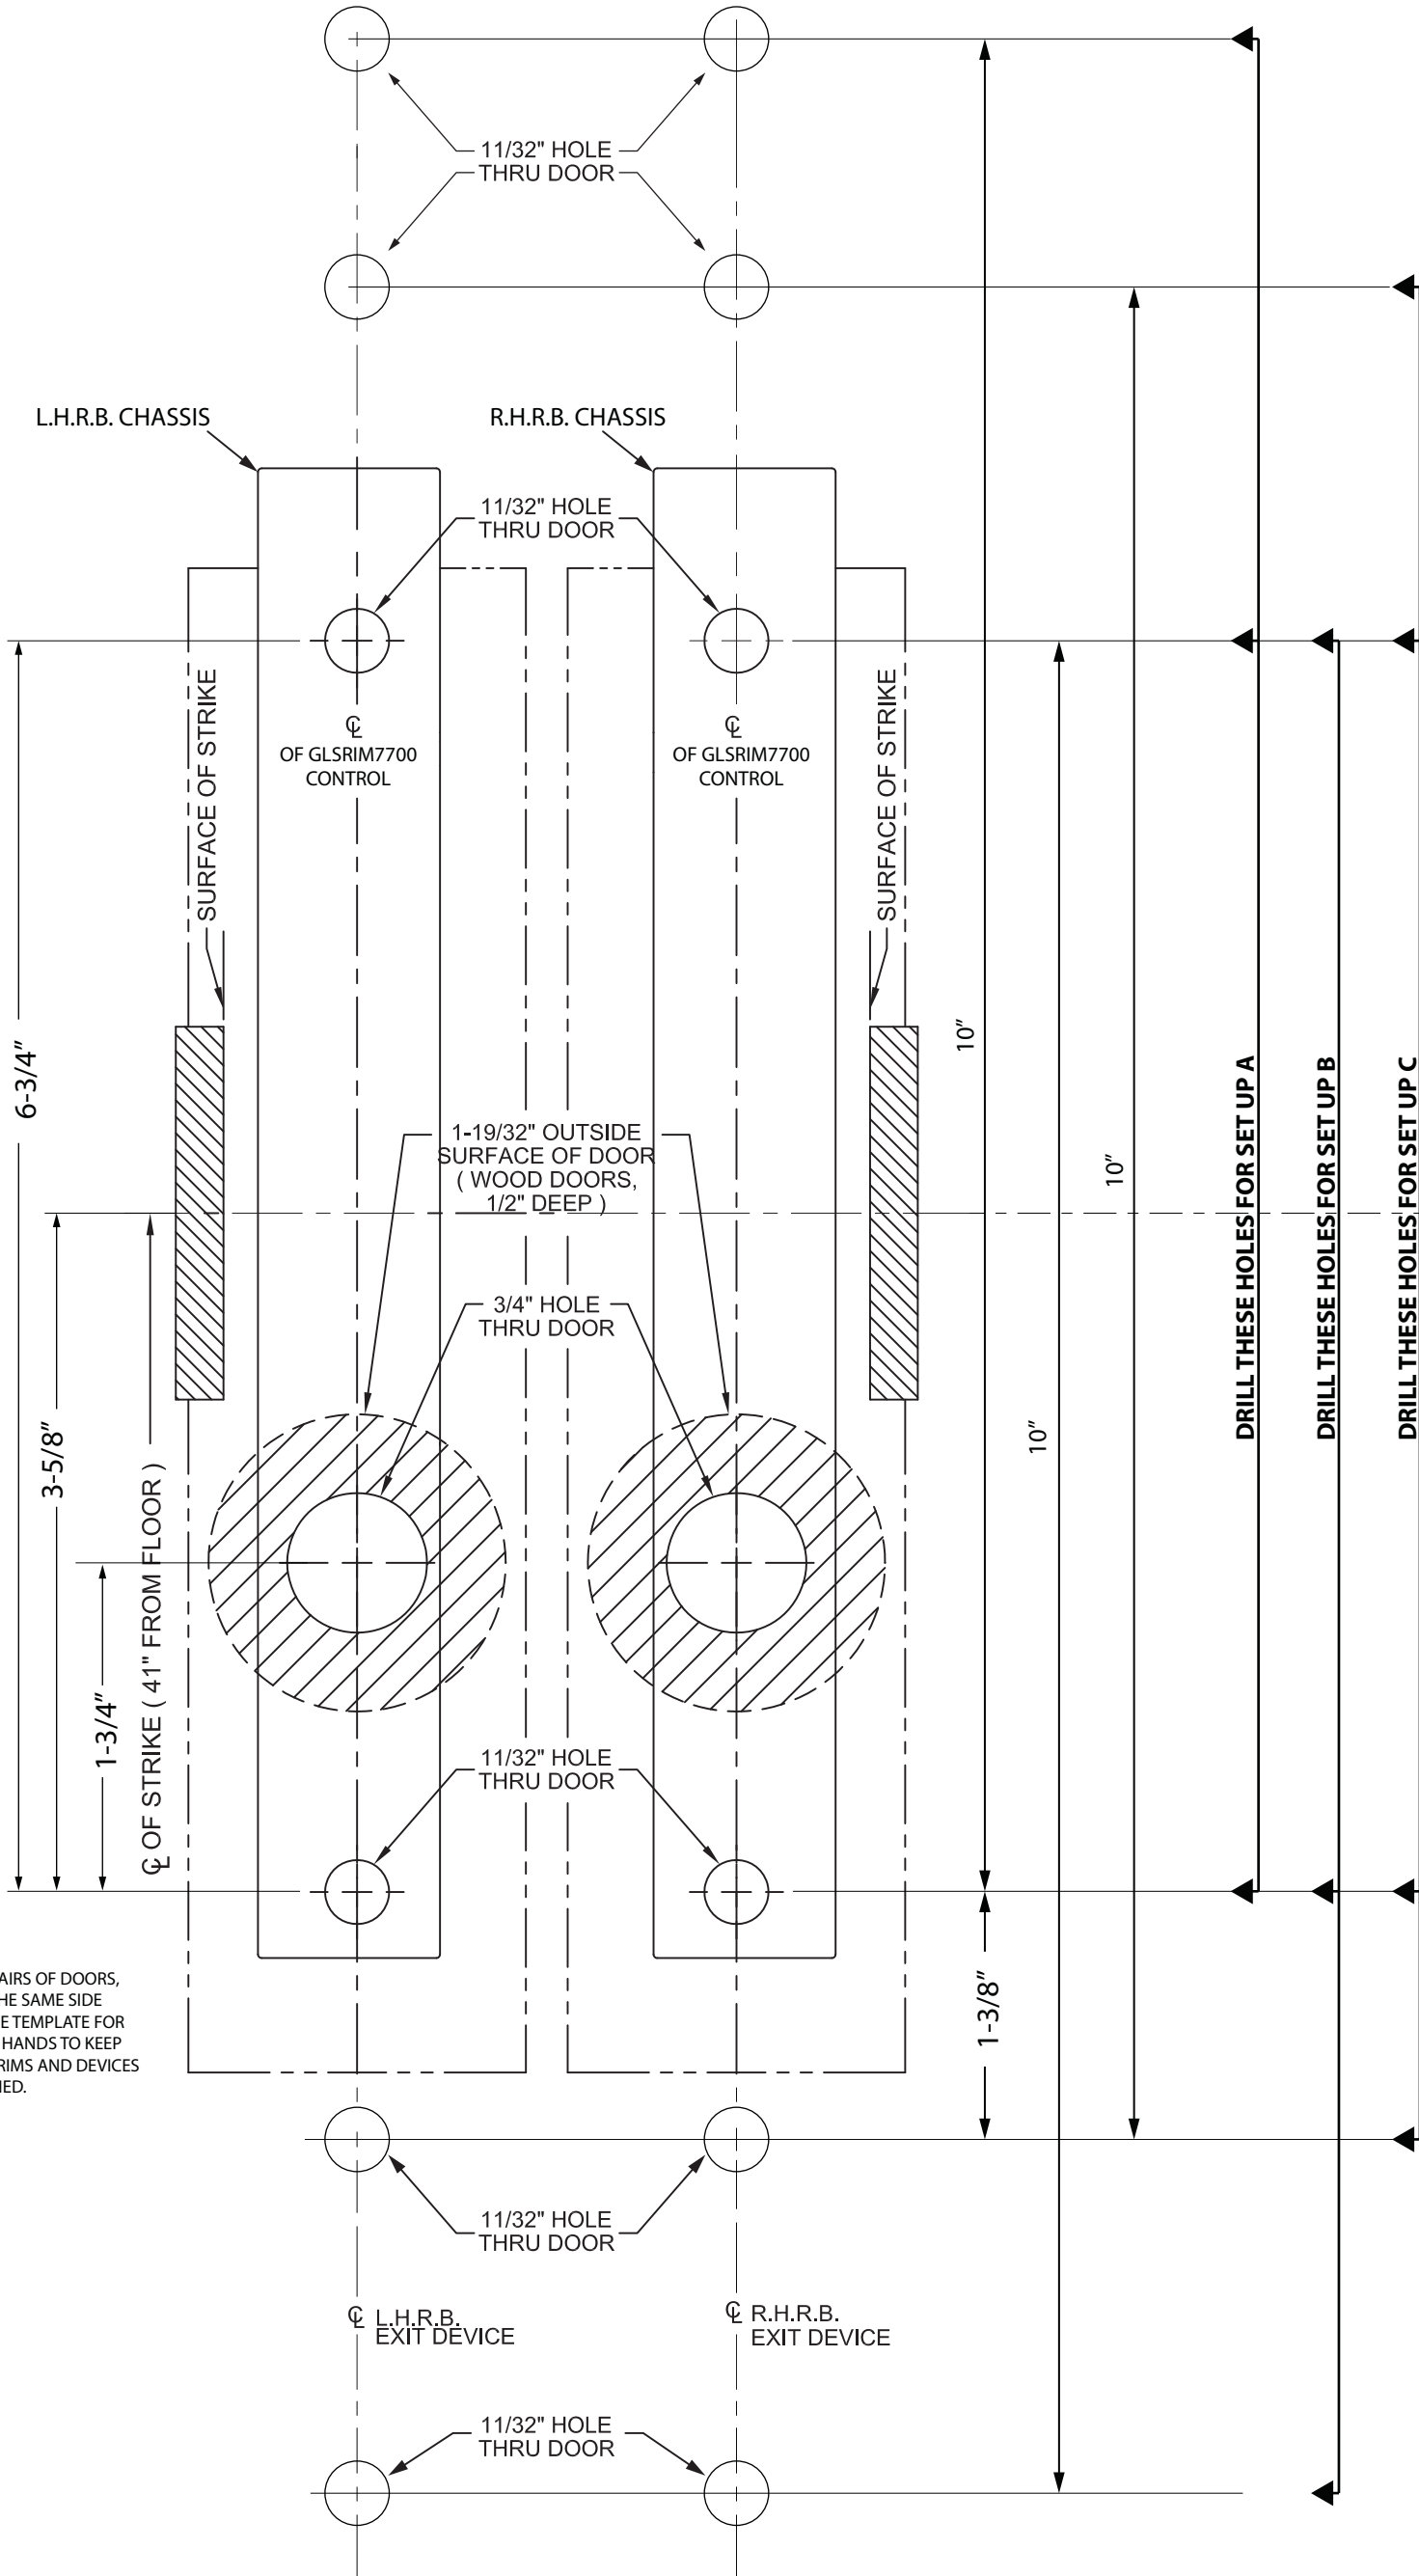

NOTE: FOR PAIRS OF DOORS, USE THE SAME SIDE OF THE TEMPLATE FOR BOTH HANDS TO KEEP THE TRIMS AND DEVICES ALIGNED.