


INSTRUCTIONS ON HOW TO CHANGE THE BATTERY ON EXISTING ALARMED PANIC BAR OR INSTALLING NEW LOUDER SIREN ALARM KITS


APPLICABLE TO 2200 AND 9800 SERIES VERTICAL EXIT DEVICES




1. Remove top & bottom screws from end cap.

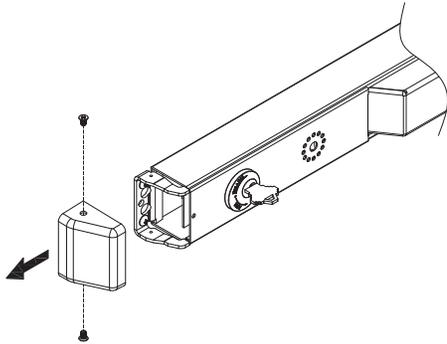


2. Slightly pry both sides of mounting bracket as shown.

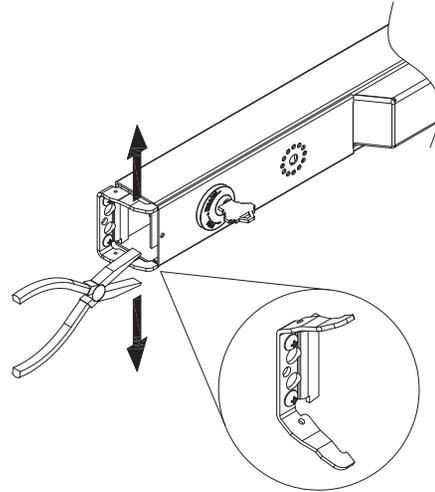


3. Slide the key assembly towards the edge of the exit device.

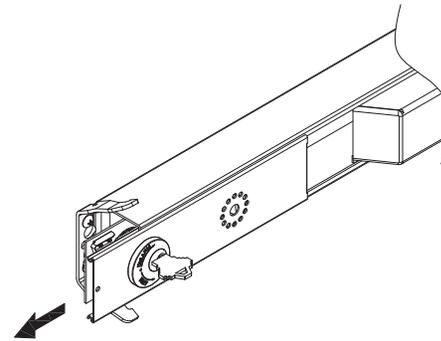


4. Replace the battery.

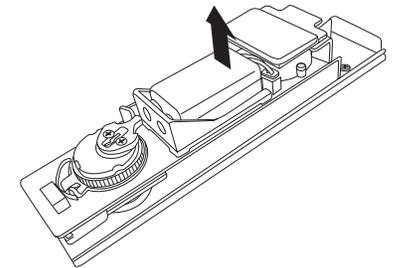


5. Slide back the key assembly alarm kit.

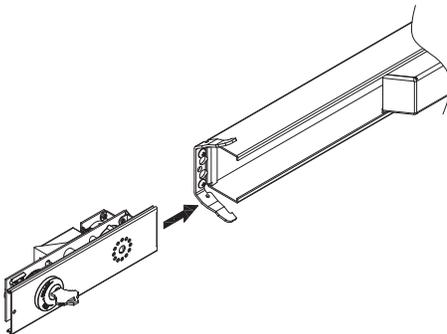

6. Make sure to line it up with the groove of the push rail assembly.

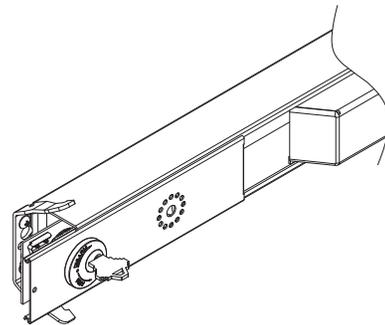

7. Carefully pry back the mounting brackets to its original position.

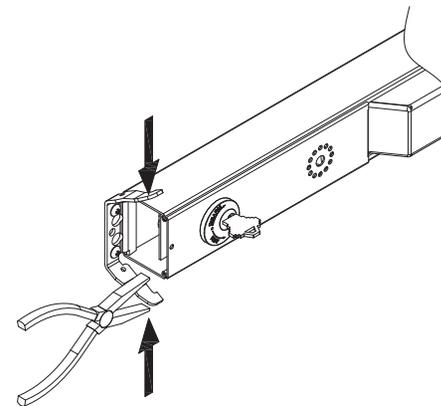

8. Place the end cap then tighten both screws.

